
### **LINEARE**


# DESIGN + ENGINEERING GROHE GERMANY

99.349.031/ÄM 230985/09.15

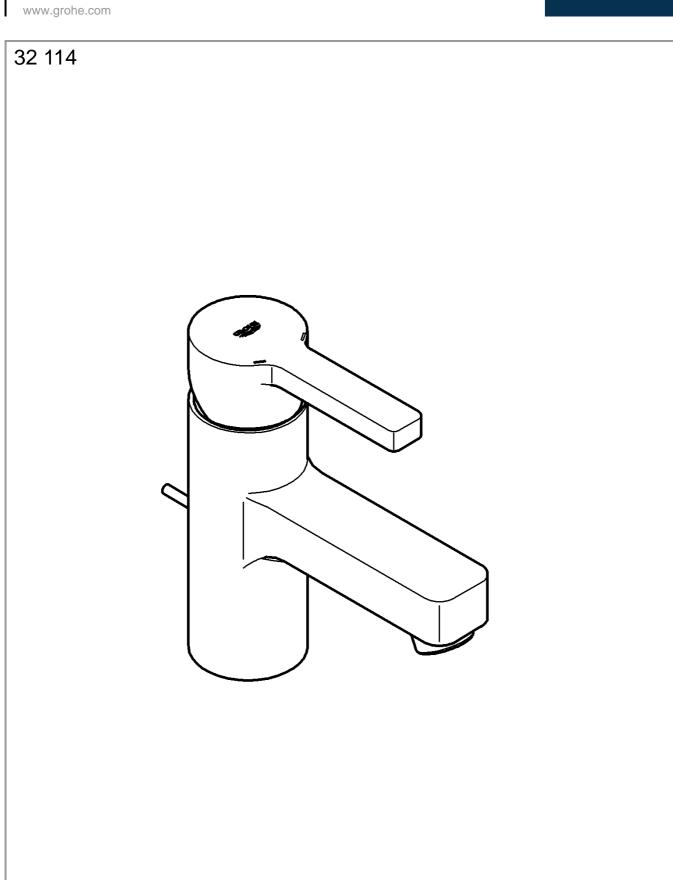






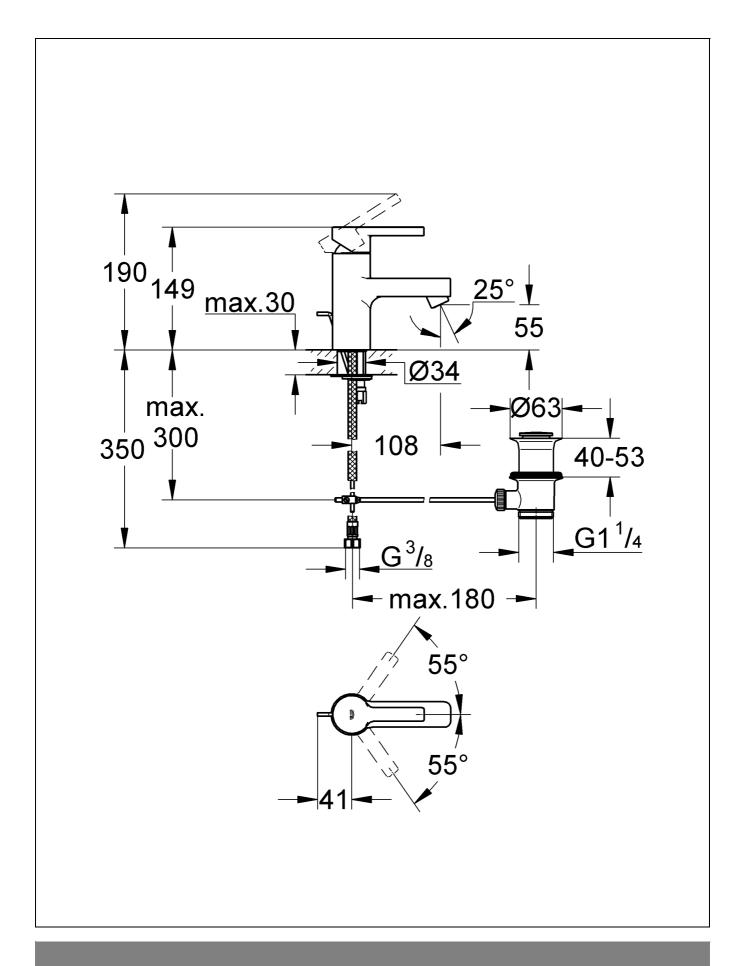

Please pass these instructions on to the end user of the fitting.

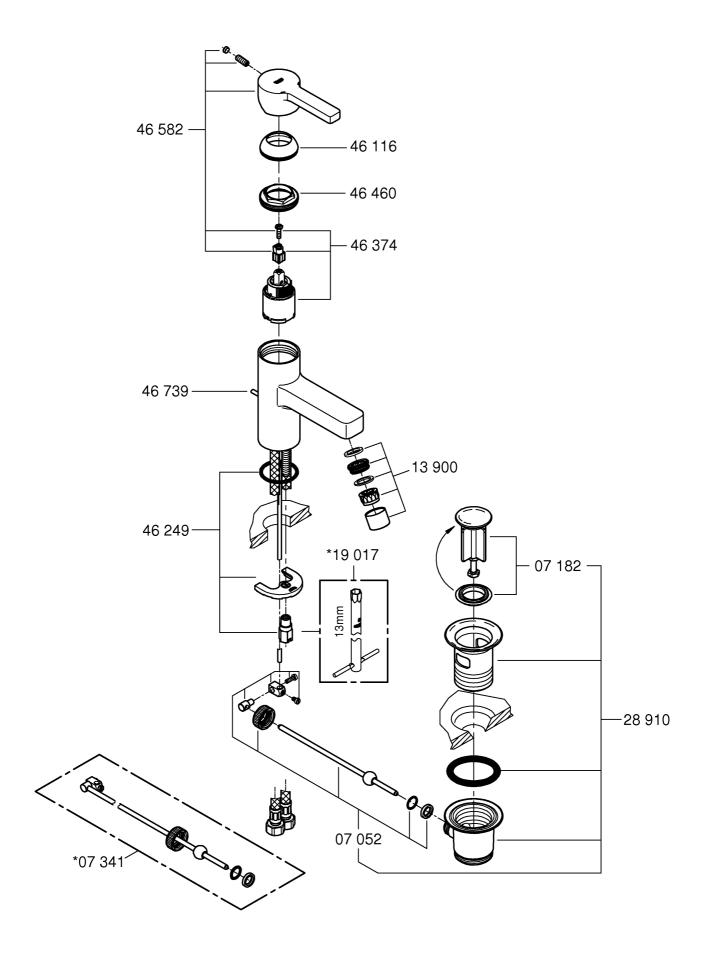



#### **Application**

Can be used in conjunction with: Pressurised storage heaters, thermally and hydraulically controlled instantaneous heaters. Operation with low-pressure displacement water heaters is **not** possible.

## **Specifications**

Minimum flow pressure
Maximum operating pressure
Test pressure
16 bar

If static pressure is greater than 5 bar, fit pressure reducer. Avoid major pressure differences between cold and hot water

• Flow rate at 0.1 bar flow pressure with flow straightener:

approx. 3 l/min

Temperature

Hot water inlet (maximum):
 Recommended (energy saving):
 60 °C

- thermal disinfection possible

• Water connection cold - right hot - left

**Maintenance** 

Inspect and clean all parts, replace if necessary and grease with special grease.

#### Shut off cold and hot water supply!

I.Replacing the cartridge, see Fig. [5].

- 1. Lever out plug (B).
- Remove set screw (C) using a 3mm allen key and pull off lever (D).
- 3. Pull off cap (E).
- 4. Turn out screwing (F) using a socket spanner 32mm.
- 0.1 bar 5. Change complete cartridge (G).

Assemble in reverse order.

#### Observe the correct installation position!

Make sure that the cartridge seals engage in the grooves and the locating pins at the base of the cartridge slot into the apertures on the housing.

Screw in and tighten screwing (F).

II. Flow straightener, see fold-out page II.

Unscrew and clean flow straightener (13 900).

Assemble in reverse order.

#### Installation

Flush piping system prior and after installation of fitting thoroughly (Consider EN 806)!

**Installation and connection**, see fold-out page III, Fig. [1] and [3].

Refer to the dimensional drawing on fold-out page I.

When assembling, the waste rod (A) has to be placed into the body.

**Fit pop-up waste set**, see fold-out page III, Fig. [2]. Seal plug-hole rim.

The cold water supply must be connected on the right and the hot water supply on the left.

Open cold- and hot water supply and check connections for watertightness!

Check fitting for correct function, see Fig. [4].

#### Flow rate limiter

This mixer is fitted with a flow rate limiter, permitting an infinitely individual variable reduction in the flow rate.

The highest possible flow rate is set by the factory before dispatch.

The use of flow rate limiters in combination with hydraulic instantaneous water heaters is not recommended.

For commissioning see "replacing the cartridge" point 1 to 4, Fig. [5] and [6].

**Replacement parts,** see fold-out page II (\* = special accessories).


#### Care


#### Dear Customer,


We want to ensure that you get long-lasting satisfaction and pleasure from your GROHE fitting. Therefore, please read the following care instructions because damage to the surface and underlying material resulting from improper treatment is not covered by warranty.


Do not use any abrasive sponges or scouring agents for cleaning. We also advise you not to use cleaning agents containing solvent or acid, limescale removers, household vinegar and cleaning agents with acetic acid in them. They are aggressive to the surface - and will leave your fitting dull and scratched. As the formulations of commercially available cleaning agents frequently change, we cannot guarantee they will provide the gentle care our fitting deserves.


Clean the fitting with a little soap and a moist cloth only, then simply rinse off and wipe dry. You can avoid lime spots by drying the fitting each time it is used. If lime deposits do occur, remove them with **GrohClean**, our environment-friendly cleaning liquid. **GrohClean** is specially formulated to clean the surface of our fittings gently. **GrohClean** is available from your supplier.

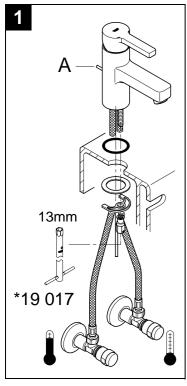


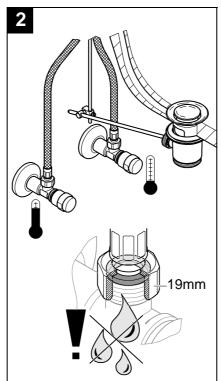


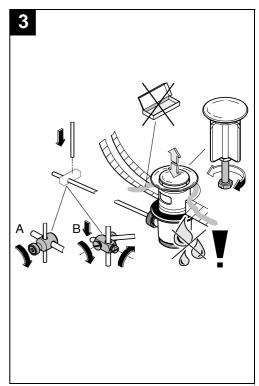

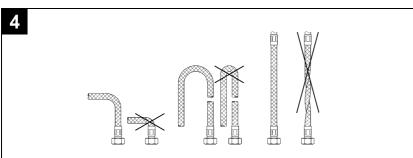

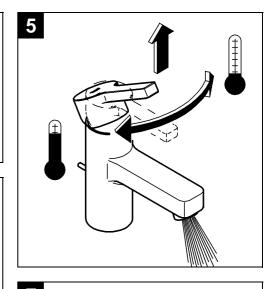

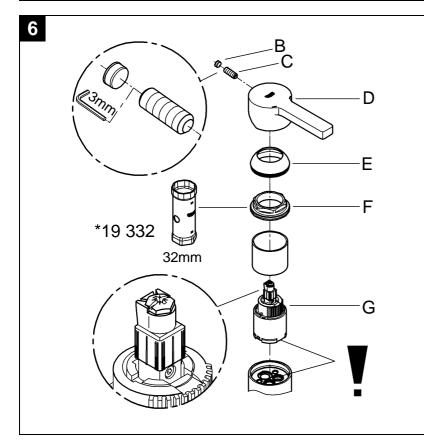

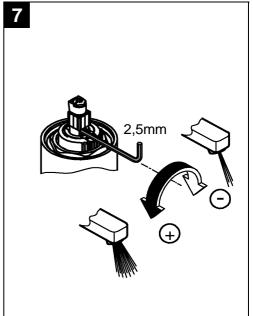

# Pure Freude an Wasser



D

(C) +49 571 3989 333 impressum@grohe.de



**(**) +43 1 68060 info-at@grohe.com

(AUS)

**Argent Sydney (**) +(02) 8394 5800 **Argent Melbourne (**) +(03) 9682 1231



**(**) +32 16 230660 info.be@grohe.com

(BG)

(2) +359 2 9719959 grohe-bulgaria@grohe.com

(CAU)

(C) +99 412 497 09 74 info-az@grohe.com

(CDN)

**(**) +1 888 6447643 info@grohe.ca

(CH)

(f) +41 448777300 info@grohe.ch

(CN)

(\*) +86 21 63758878

(CY)

(f) +357 22 465200 info@grome.com

(CZ)

**(**) +420 277 004 190 grohe-cz@grohe.com

(DK)

**(**) +45 44 656800 grohe@grohe.dk

(E)

(**?**) +34 93 3368850 grohe@grohe.es

(EST)

(f) +372 6616354 grohe@grohe.ee



(f) +33 1 49972900 marketing-fr@grohe.com

(FIN)

(**?**) +358 10 8201100 teknocalor@teknocalor.fi

(GB)

(**?**) +44 871 200 3414 info-uk@grohe.com

(GR)

**(**) +30 210 2712908 nsapountzis@ath.forthnet.gr

Н

**(**) +36 1 2388045 info-hu@grohe.com

(HK)

(f) +852 2969 7067 info@grohe.hk

ı

(f) +39 2 959401 info-it@grohe.com

(IND)

**(**) +91 124 4933000 customercare.in@grohe.com

IS )

(C) +354 515 4000 jonst@byko.is

(**?**) +81 3 32989730 info@grohe.co.jp

(KZ)

(r) +7 727 311 07 39 info-cac@grohe.com

(LT)

(f) +372 6616354 grohe@grohe.ee

LV)

(f) +372 6616354 grohe@grohe.ee

(MAL)

(f) +1 800 80 6570 info-singapore@grohe.com

N

**(**) +47 22 072070 grohe@grohe.no

(NL)

**(**) +31 79 3680133 vragen-nl@grohe.com

(NZ)

(C) +09/373 4324

(**?**) +351 234 529620 commercial-pt@grohe.com

(f) +48 22 5432640 biuro@grohe.com.pl

RI)

(f) +62 21 2358 4751 info-singapore@grohe.com

(f) +40 21 2125050 info-ro@grohe.com

(ROK)

(f) +82 2 559 0790 info-singapore@grohe.com

(f) +63 2 8041617

(RUS)

**(**) +7 495 9819510 info@grohe.ru

**(**) +46 771 141314 grohe@grohe.se

(SGP)

(f) +65 6 7385585 info-singapore@grohe.com (SK)

+420 277 004 190 grohe-cz@grohe.com

Т

**(**) +66 2610 3685 info-singapore@grohe.com

 $(\mathsf{TR})$ 

+90 216 441 23 70 GroheTurkey@grome.com

(UA)

(f) +38 44 5375273 info-ua@grohe.com

(USA)

**(**) +1 800 4447643 us-customerservice@grohe.com

(VN)

(**?**) +84 8 5413 6840 info-singapore@grohe.com

(AL)(BiH)(HR)(KS) (ME)(MK)(SLO)(SRB)

+385 1 2911470 adria-hr@grohe.com

Eastern Mediterranean, Middle East - Africa Area Sales Office: info@grome.com

(IR)(OM)(UAE)(YEM) (f) +971 4 3318070 grohedubai@grome.com

Far East Area Sales Office: **(**) +65 6311 3600 info@grohe.com.sg