



 

 

 


38 743

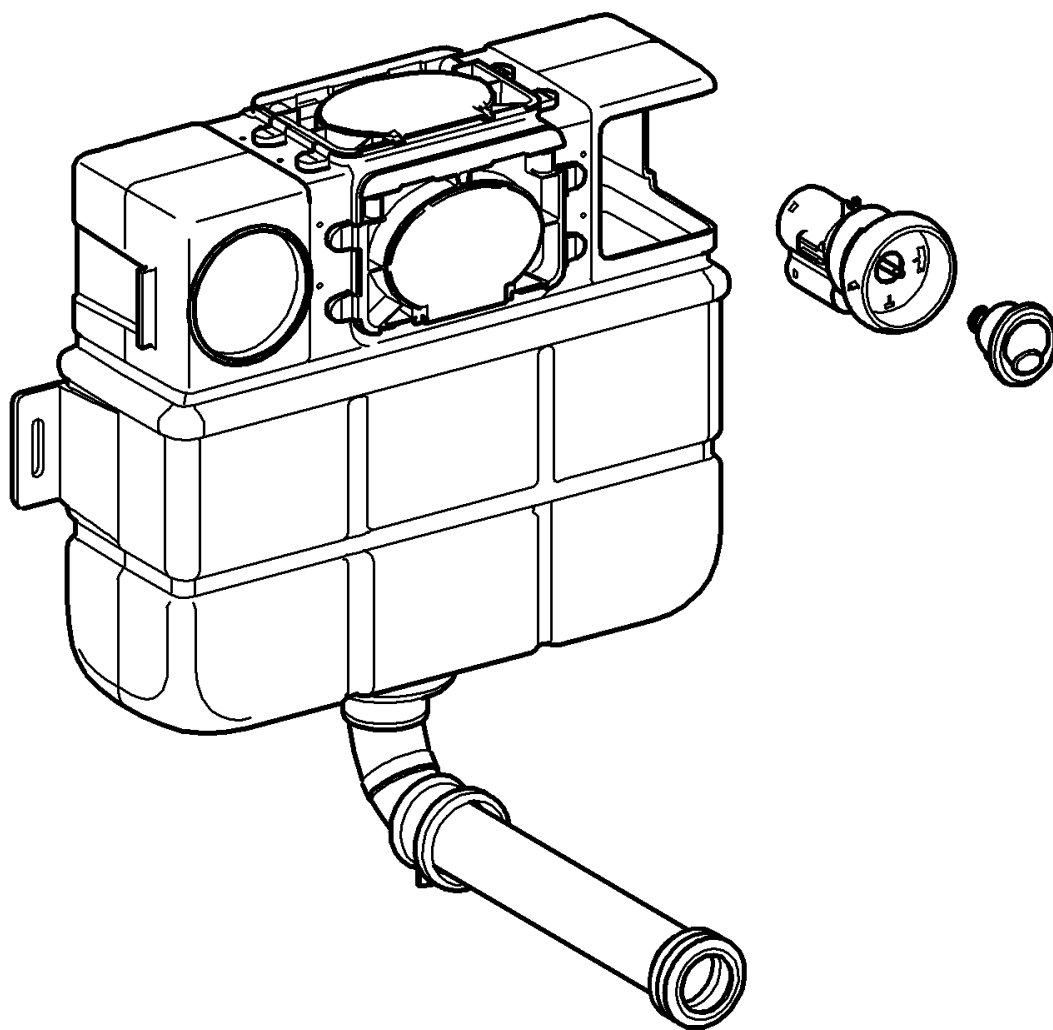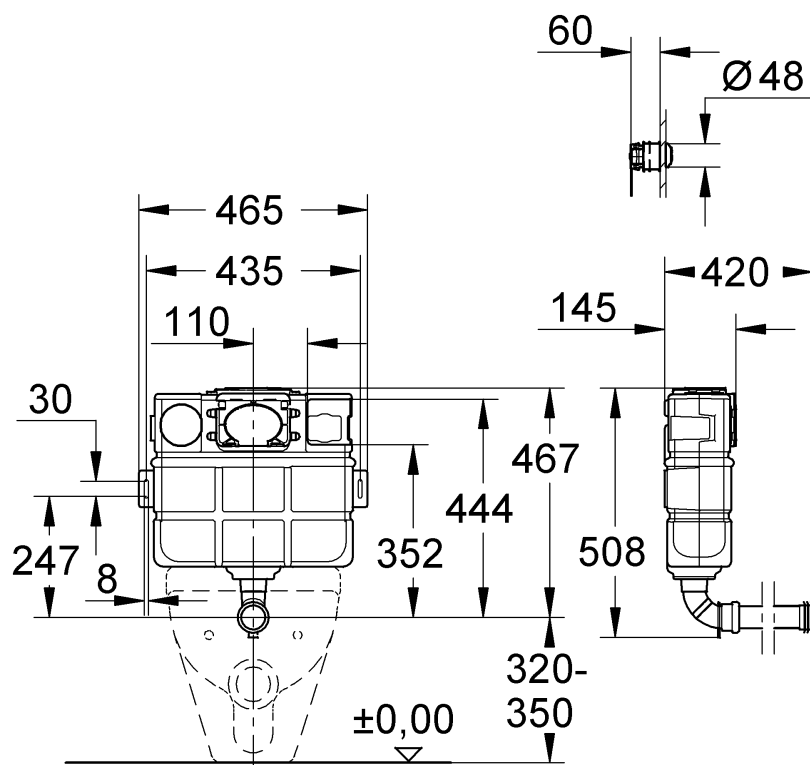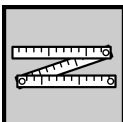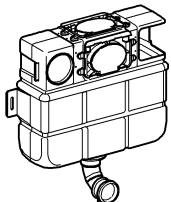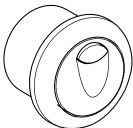




#### Parts delivered:

Cistern with protection plates			Flush valve
Rosette and buttons			Filler valve with stand pipe
Pneumatic actuation			Flushpipe and connector





Please pass these instructions on to the end user of the cistern.  
Please ensure access is provided into cistern for service and maintenance.

Spare parts:

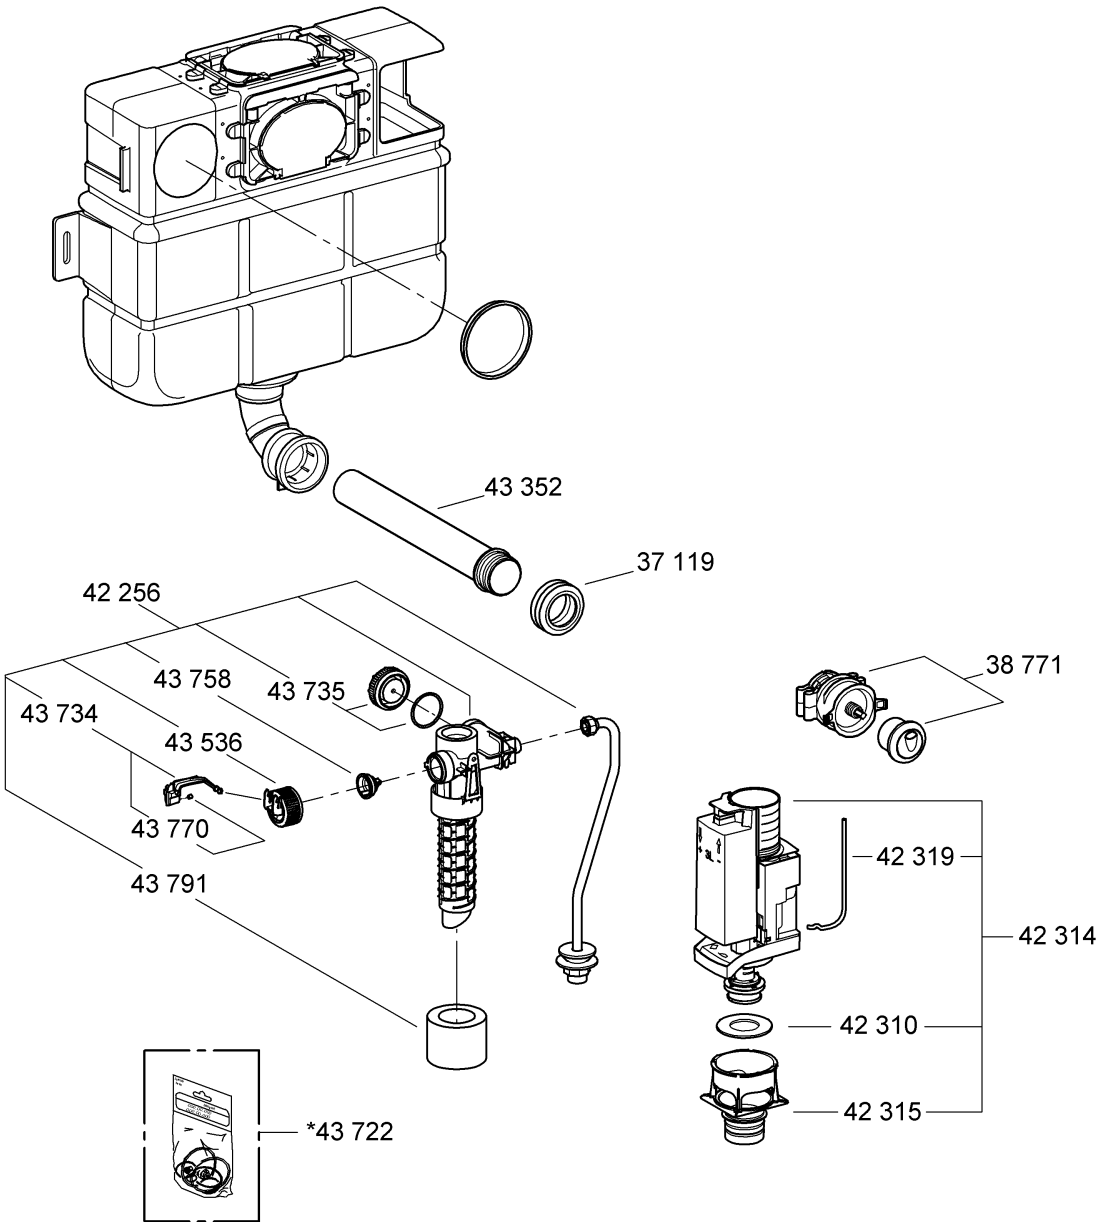


Part No	Description	Part No	Description
42 314 000	Discharge valve, dual flush	42 256 000	Filler valve with stand pipe
42 315 000	Valve seat	43 352 000	Flush pipe
38 771 000	Actuation, complete	37 119 000	Rubber pan connector

## Installation:

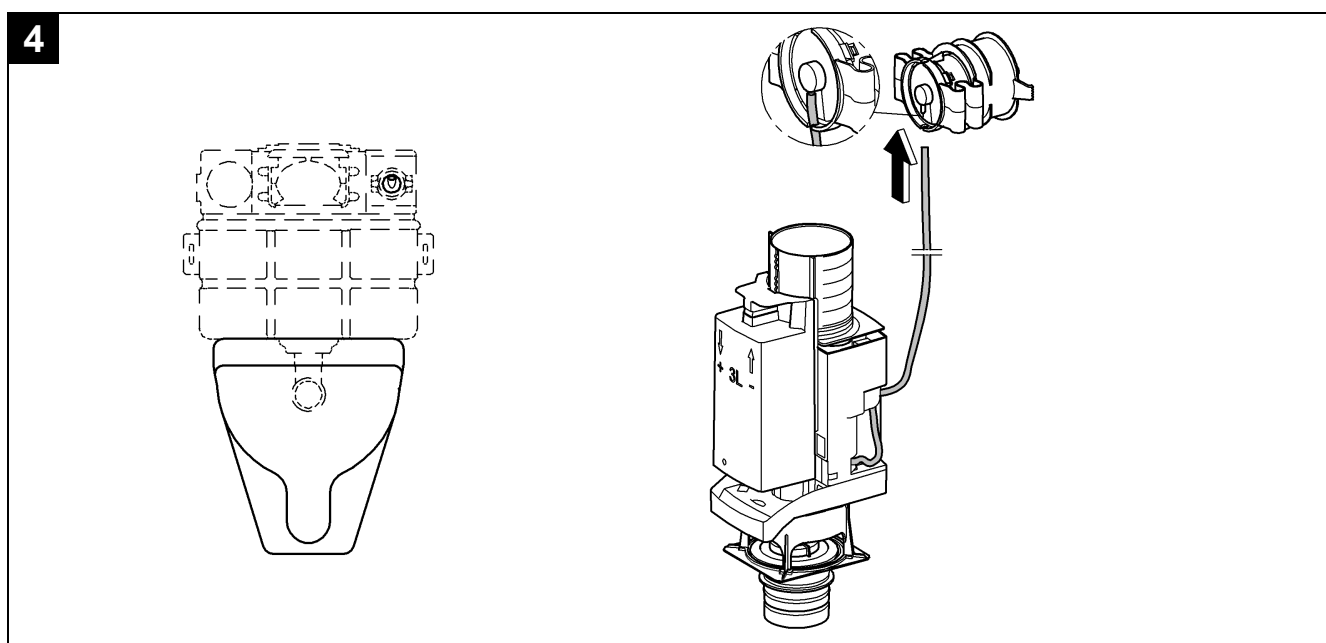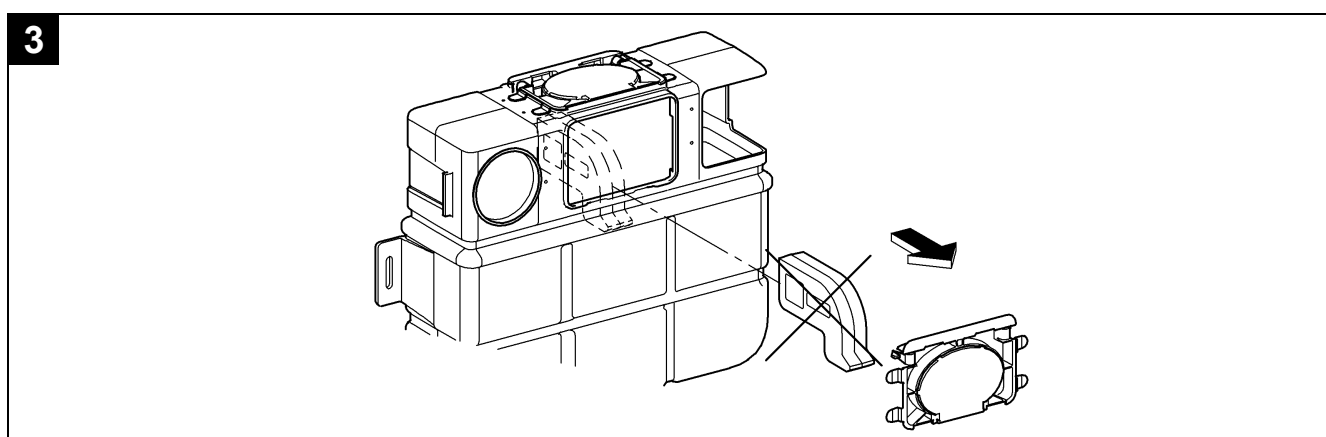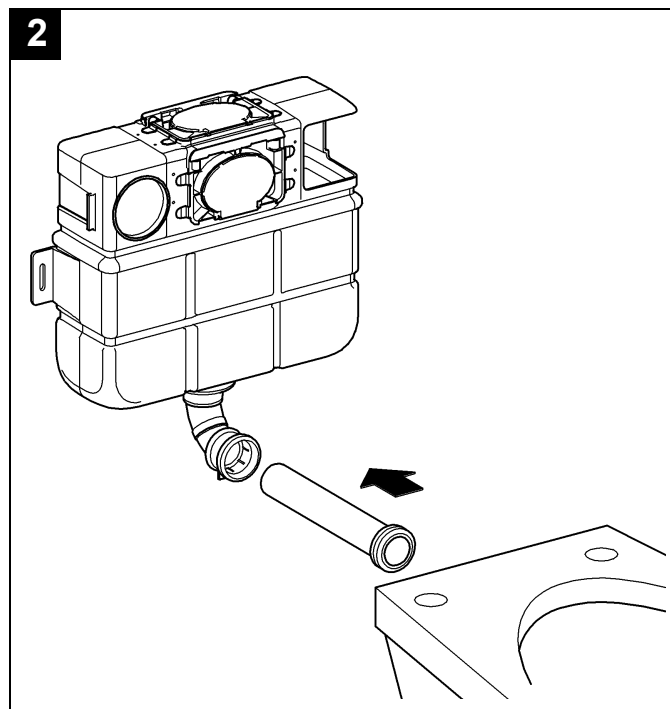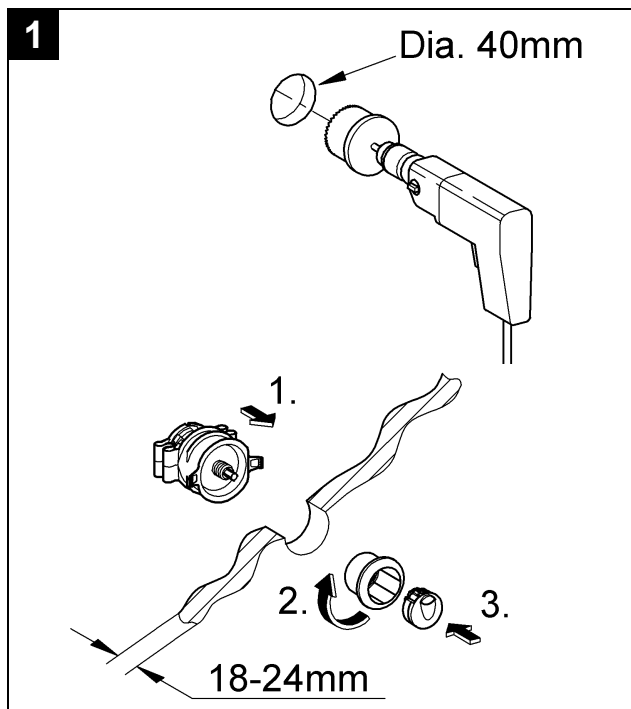


Adjustment instructions:

5

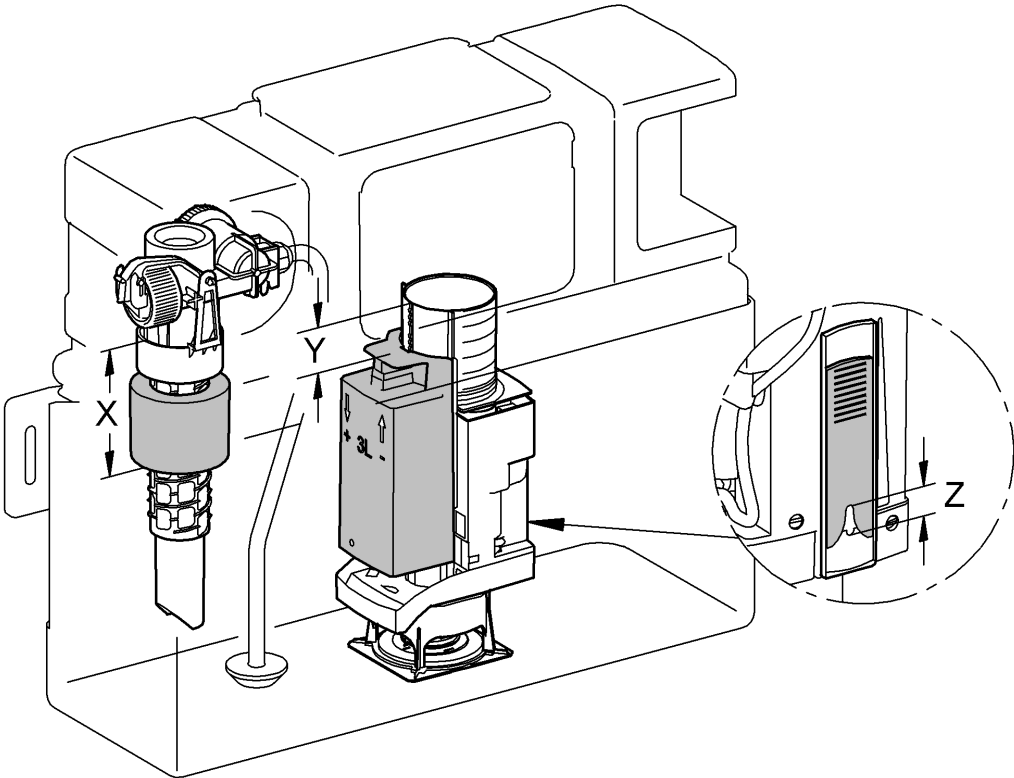

	X	Y	Z
full flush: 6 ltr. reduced flush: 3,5 ltr. (factory setting)	88 mm	29 mm	9,5 mm
full flush: 4,5 ltr. reduced flush: 3 ltr.	98 mm	26 mm	> 18 mm
full flush: > 6 ltr. reduced flush: 4 ltr.	88 mm	41 mm	closed

## Maintenance: Filler valve

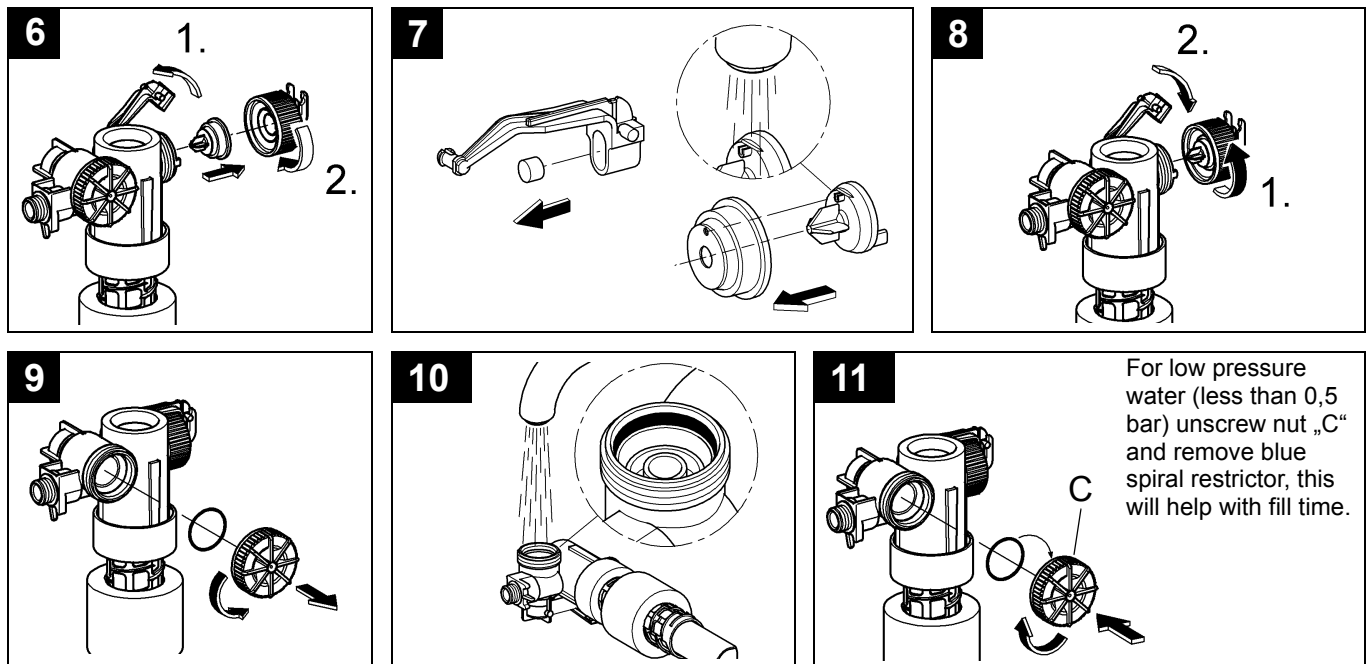

Fault	Cause	Remedy
<b>Water continually flowing into pan, through the internal overflow</b>	<ul style="list-style-type: none"> <li>• Filler valve not shutting off</li> <li>• Water level has risen above the internal overflow pipe</li> </ul>	<ul style="list-style-type: none"> <li>- Check membrane washer within fill valve for any obstruction caused by debris or damage</li> <li>- adjust polystyrene float on filler valve so that the correct water level is achieved inside the cistern</li> </ul>
<b>Water continually flowing into pan, through the seal in cistern outlet point</b>	<ul style="list-style-type: none"> <li>• Drop valve not seating</li> </ul>	<ul style="list-style-type: none"> <li>- check seating washers and seating for any debris or damage around seal, clean if necessary</li> <li>- check seating of discharge valve</li> </ul>
<b>Cistern does not flush, there is no water</b>	<ul style="list-style-type: none"> <li>• No water supply to the cistern</li> <li>• Air hose connection is impaired</li> </ul>	<ul style="list-style-type: none"> <li>- check water supply</li> <li>- check isolating valve &amp; any isolating points</li> <li>- check air hose is connected correctly</li> <li>- ensure that the air tube is not kinked</li> </ul>

## General Notes:

### 1. Fill Time/Water Inlet Pressure

- the Grohe filler valve has a blue spiral restrictor, this item can be removed in cases where the inlet water pressure is below 0.5 bar. This will improve the fill time of the water level.

### 2. Water Level

- the polystyrene float on the filler valve regulates the water level for the cistern, the filler valve is factory set to 6 litres and can set to 4,5 litres.

### 3. Air Hose Connections

- check that the air hose is correctly and securely connected, ensure the air hose is connected to the air button and the discharge valve on the cistern.

Grohe Deutschland  
Vertriebs GmbH  
Zur Porta 9  
D-32457 Porta Westfalica  
Tel.: 0 180 2 / 66 00 00  
Fax.: 0 180 2 / 66 11 11

GROHE Limited  
Blays House, Wick Road  
Englefield Green  
Egham, Surrey, TW20 0HJ  
Tel.: +44 871 200 3414  
Fax.: +44 871 200 3415