



Installation Drawing

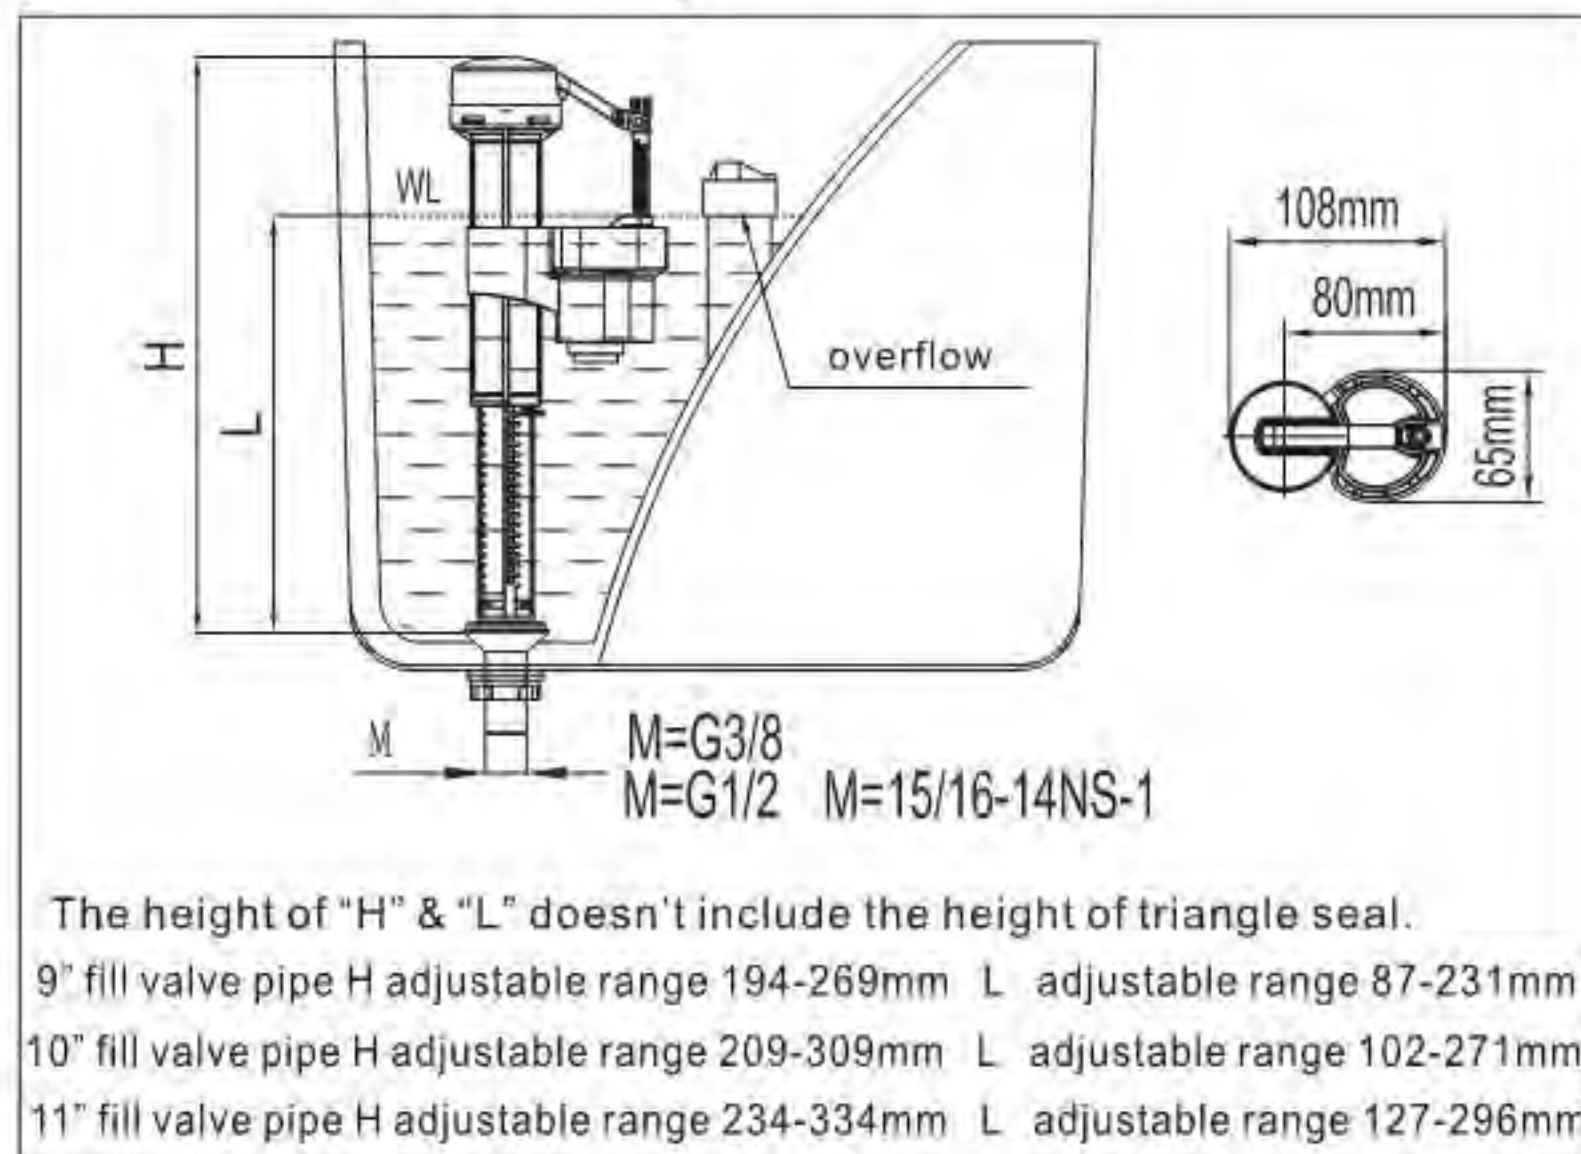

Refill tube(A refill tube is optional based on the user's requirements)

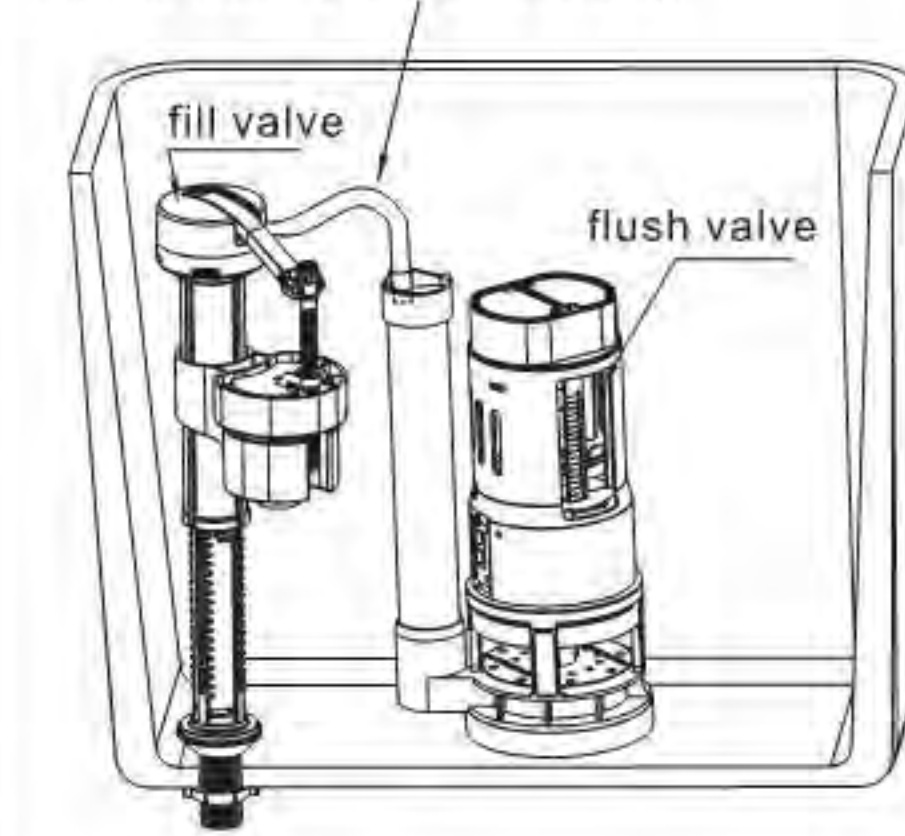

Note:

Instructions

- 1). Please read carefully the following installation instructions in order to avoid component damage or injury to the installer.
- 2). The instructions have been composed based in the latest product specifications. We reserve the right to make modifications to the packaging and specifications without providing prior notification.
- 3). When installing the fill valve, the critical level on the fill valve (identified on the valve marked "CL") should be at least 1" (25.4mm) above the top of the overflow pipe of the flush valve. This is a plumbing code.
- 4). We shall not be responsible for failures that are contributed to the use of parts other than those specified.
- 5). Water Temperature: 2°C to 45°C
- 6). Water Pressure Range: 0.02Mpa (0.2 Bar) to 0.8Mpa (8 Bar)




Warning
DO NOT USE OR DROP ANY CHLORINE OR ANY CHEMICAL RELATED COMPONENTS. USE OF SUCH PRODUCTS WILL
(1) RESULT IN DAMAGE TO TANK COMPONENTS AND MAY CAUSE FLOODING AND PROPERTY DAMAGE AND
(2) VOID WARRANTY.
DO NOT OVERTIGHTEN NUTS, OR TANK/BOWL MAY CRACK.


I、Work Preparation: Remove the inoperative tank fittings and carefully clean the water cistern/tank.
Make sure all debris has been removed prior to installing new tank fittings.

II、Water Level Adjustment


(1) Major Water Adjustment

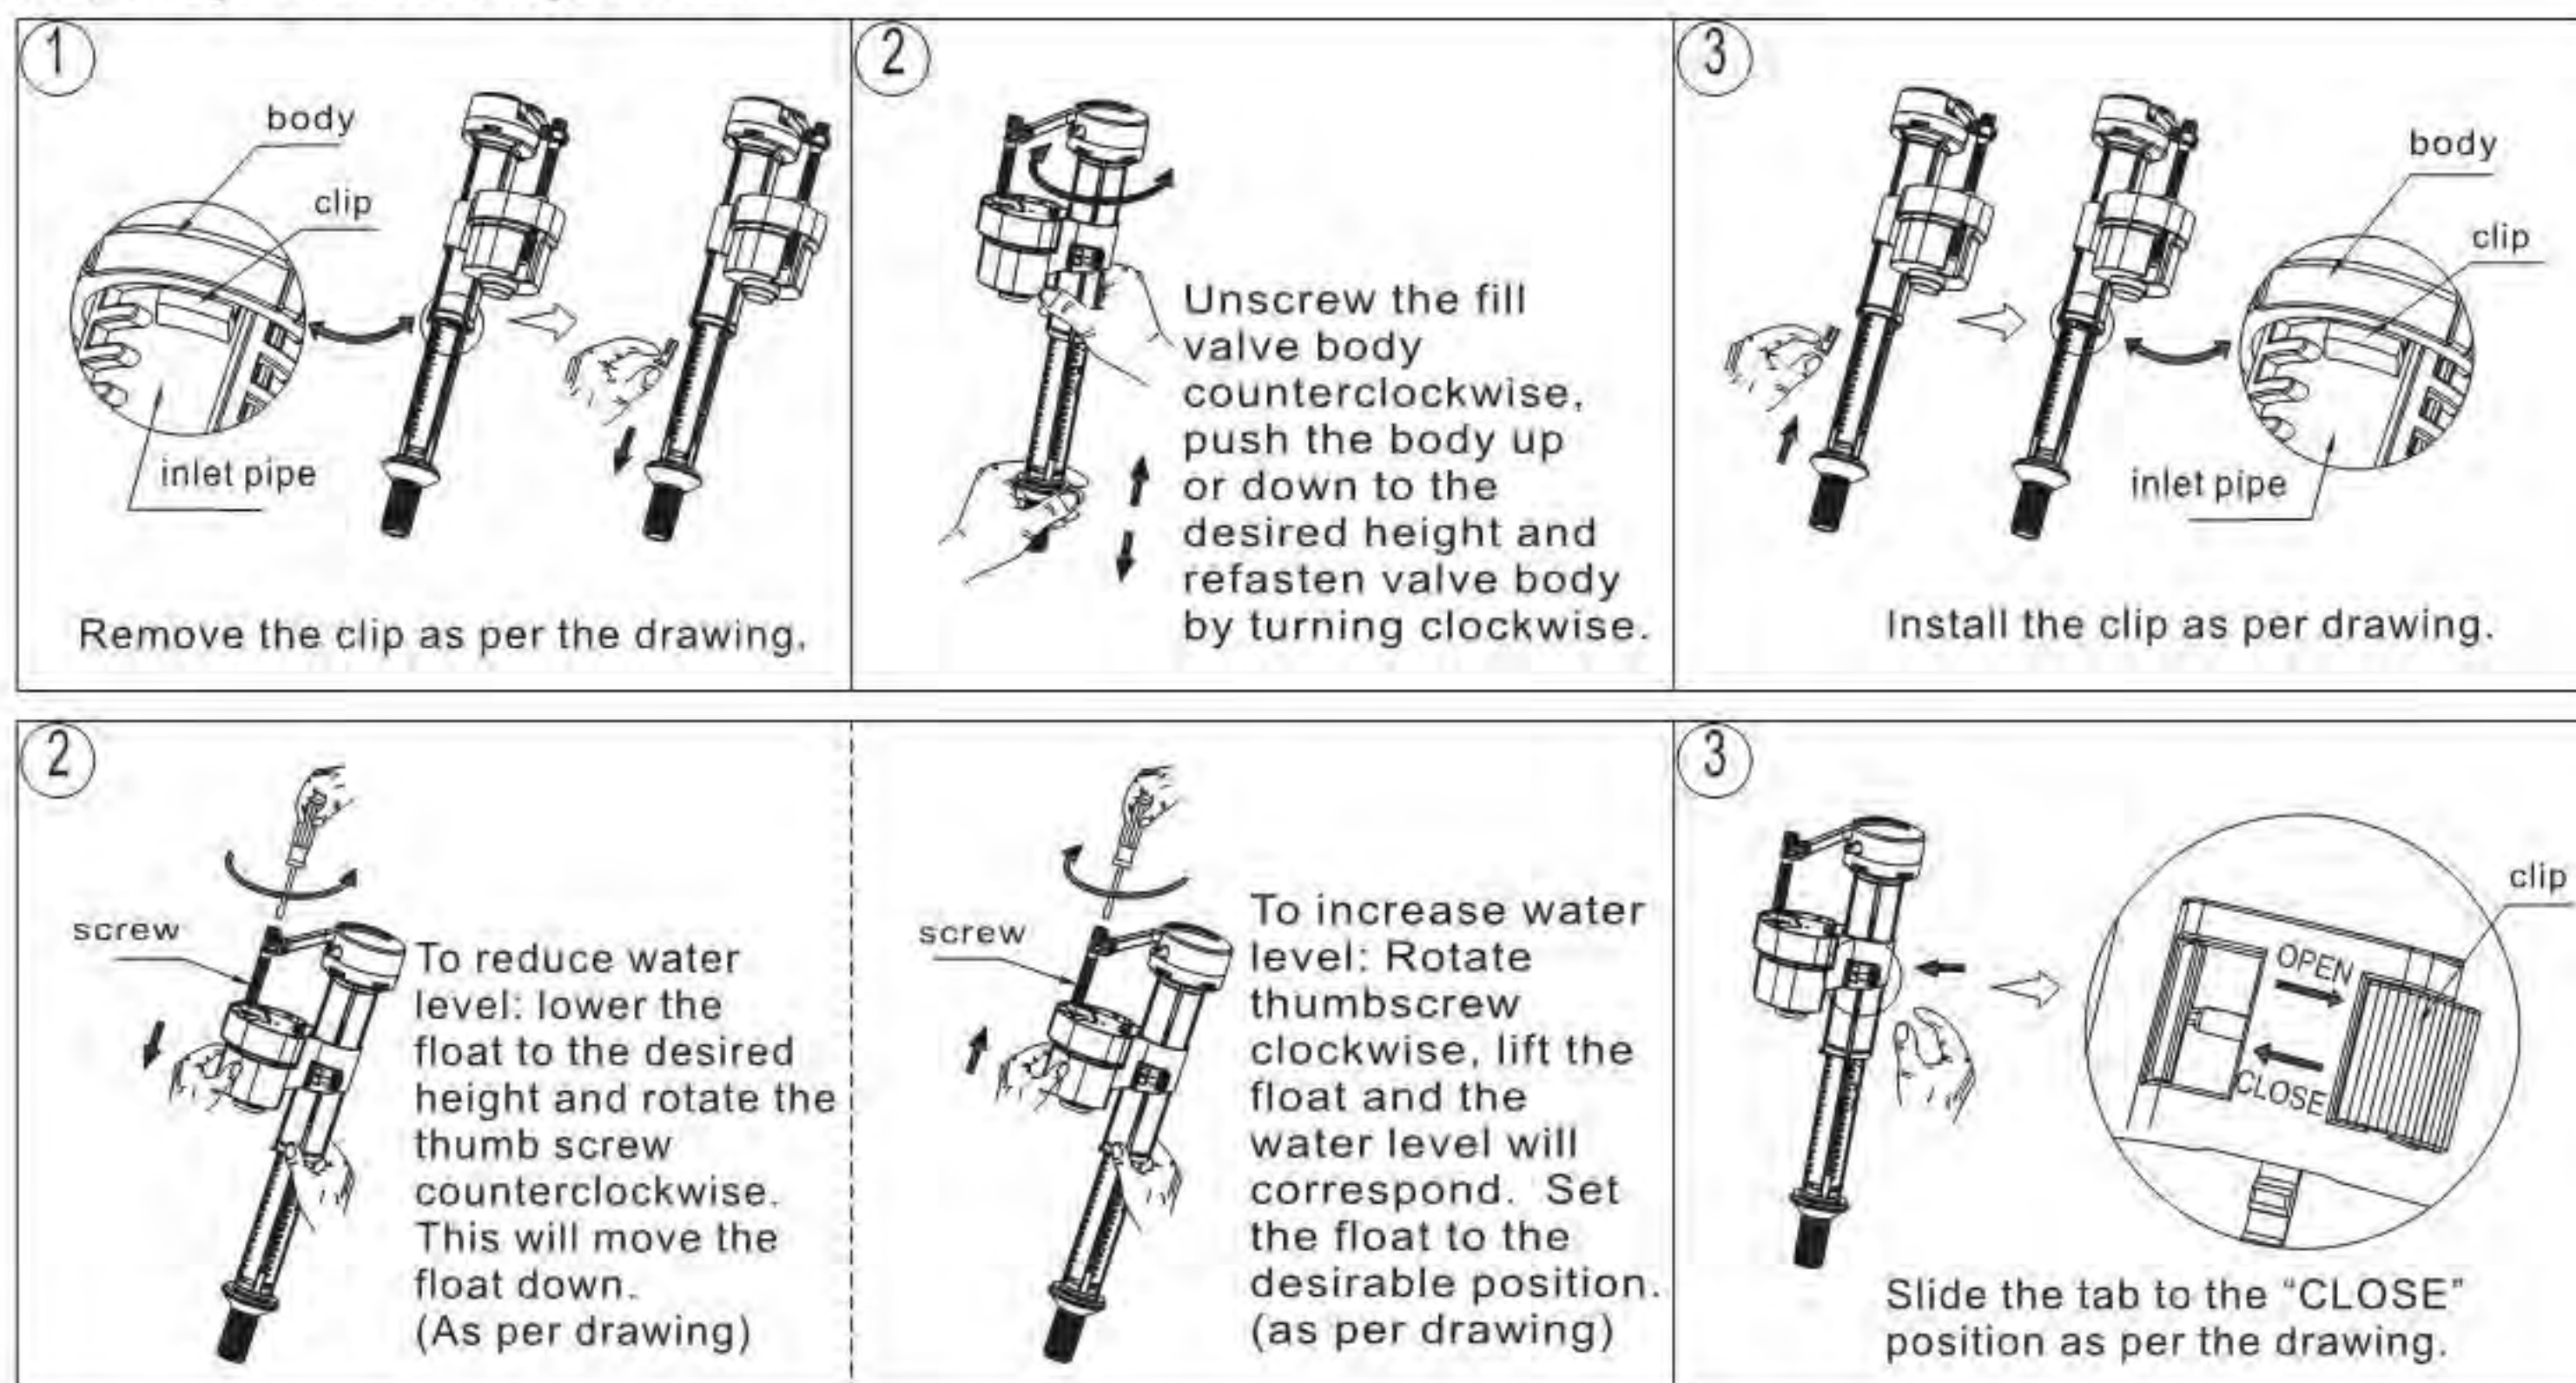

(2) Minor Water Adjustments

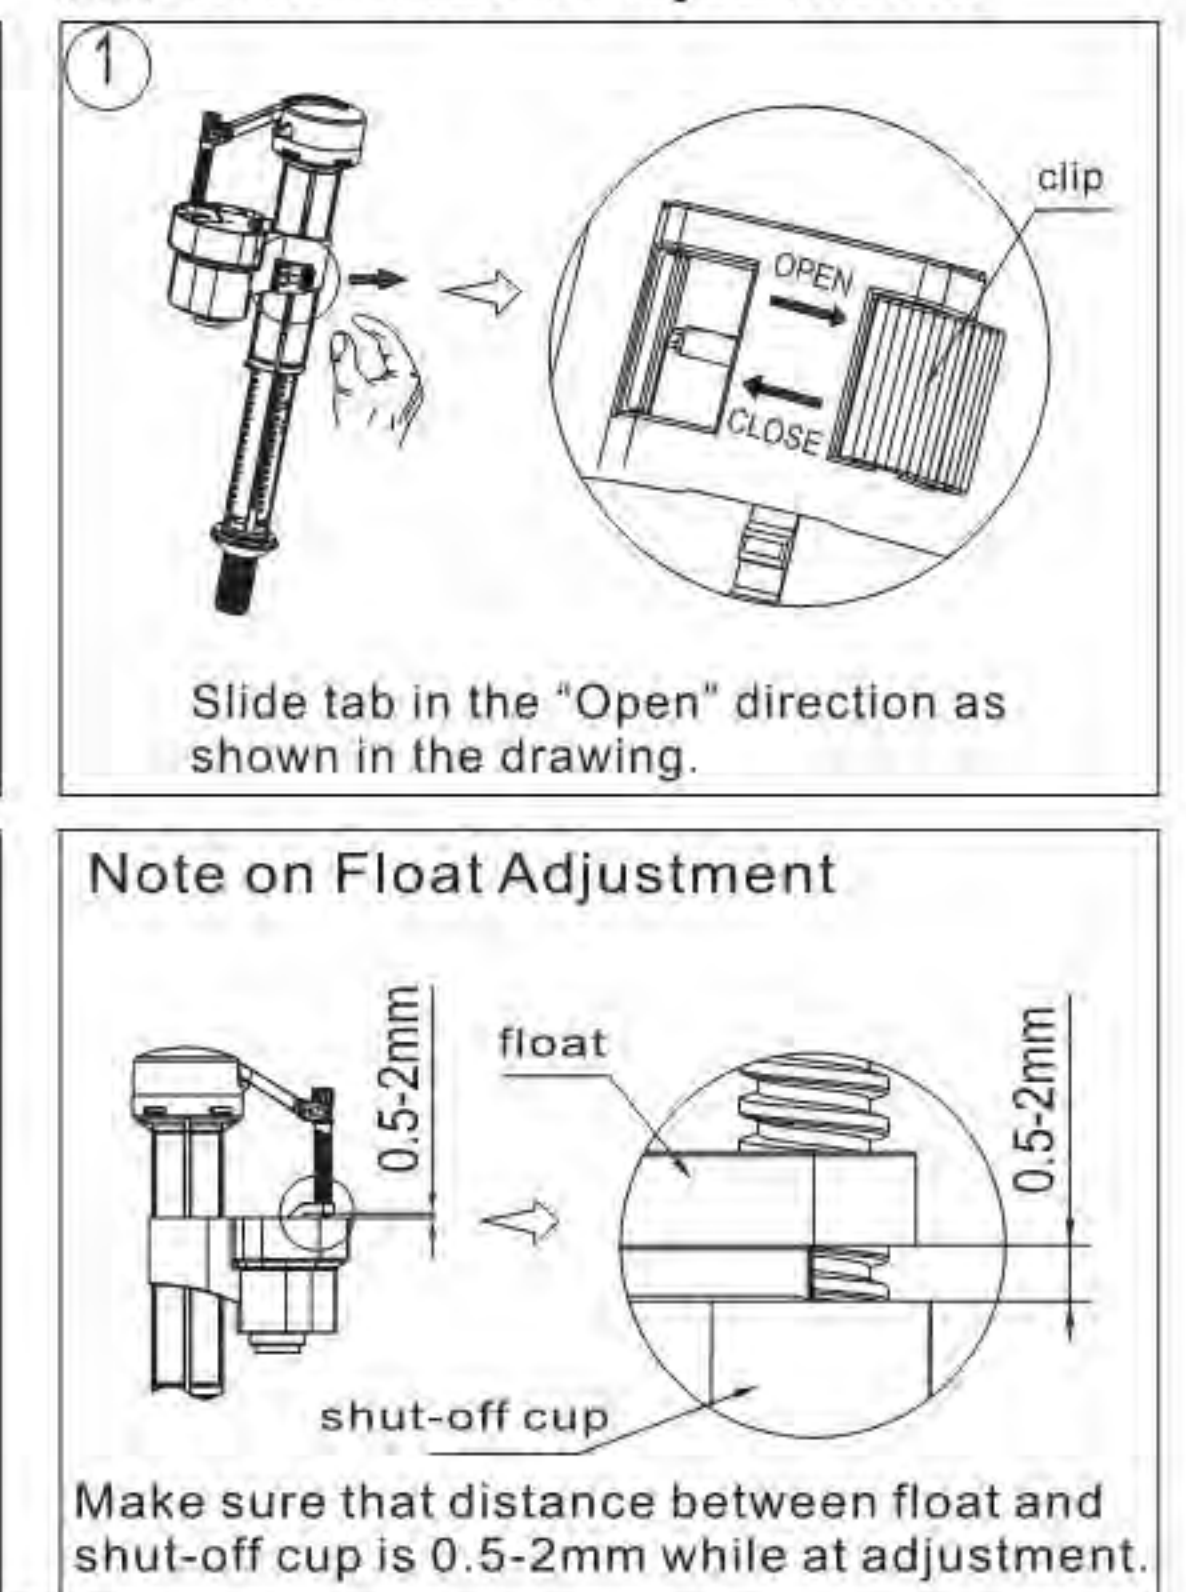

III、Fill valve Installation

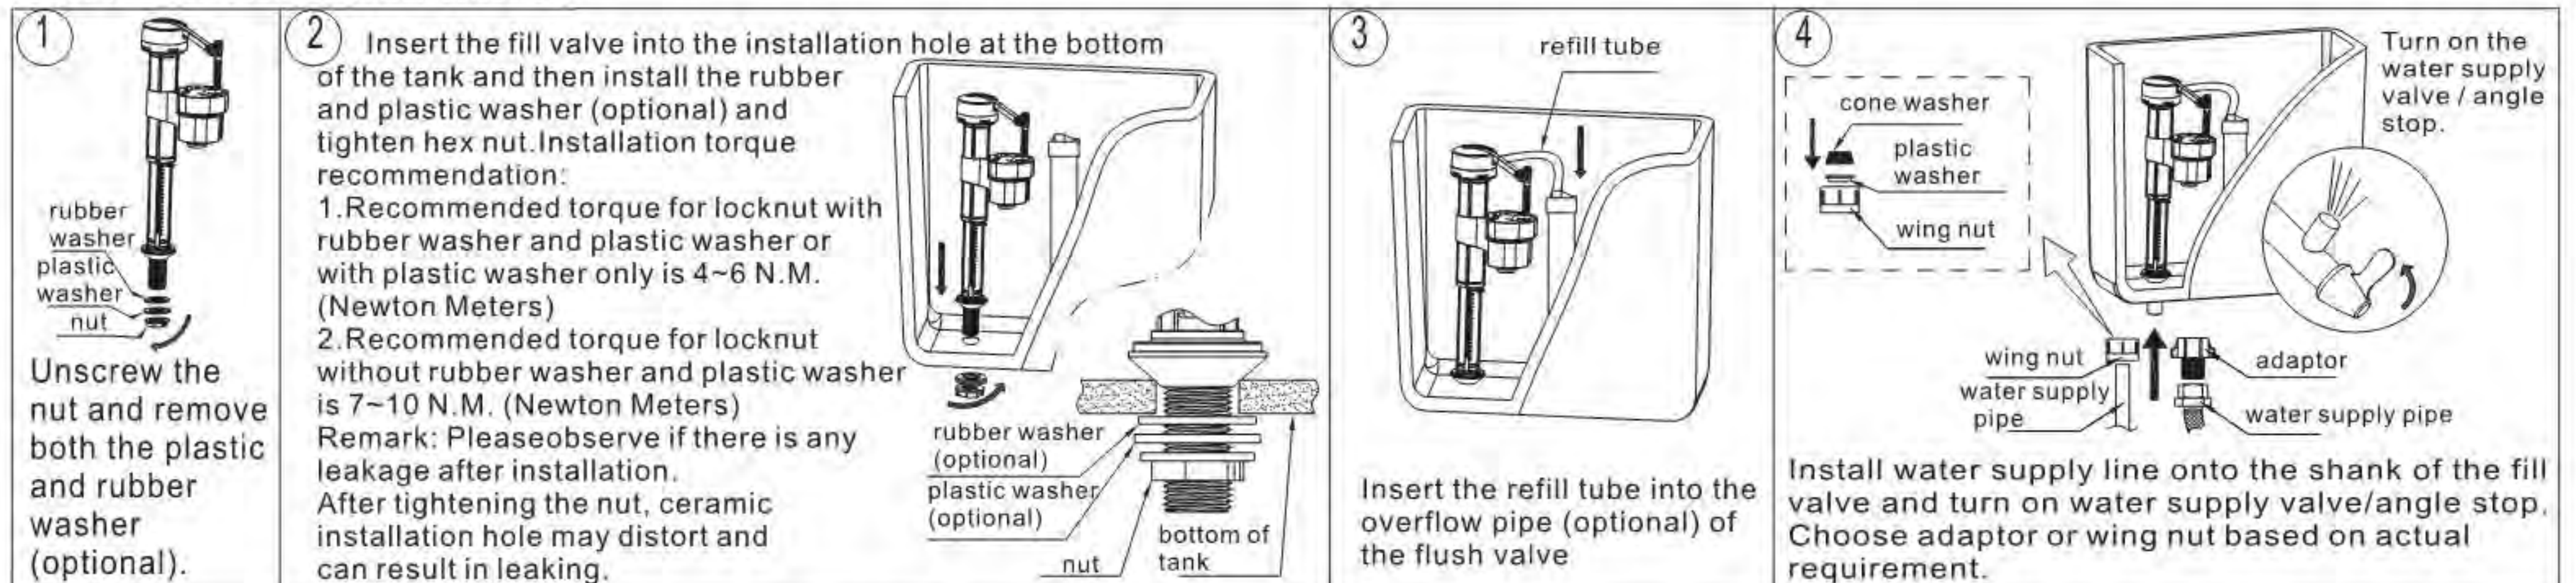


IV、Cleaning Filter (Filter which is located inside the inlet valve shank is required for cleaning periodically)



V、Troubleshooting

	Issue	Cause	Resolution
1	Water line is too high or too low.	Inlet valve is not adjusted to a suitable position.	Adjust the water level to the appropriate water level.
2	Inlet valve does not shut off.	1) The cistern/tank wall has blocked the movement of the inlet valve float. 2) The refill tube wasn't installed properly 3) Leakage of flush valve. 4) The water level is above overflow pipe of flush valve.	1) Adjust the fill valve to the appropriate position and make sure float can move freely. 2) See figure attached to re-install refill tube correctly. 3) Make sure none leakage of flush valve. 4) Re-adjust water level to appropriate.
3	Inlet valve does not turn on.	1) Water supply valve/angle stop is off. 2) The cistern/tank wall has blocked the movement of the inlet valve float. 3) Filter screen is dirty	1) Turn on the water supply valve/angle stop. 2) Adjust the fill valve to the appropriate position and make sure float can move freely. 3) Clean filter screen

Installation of refill tube :

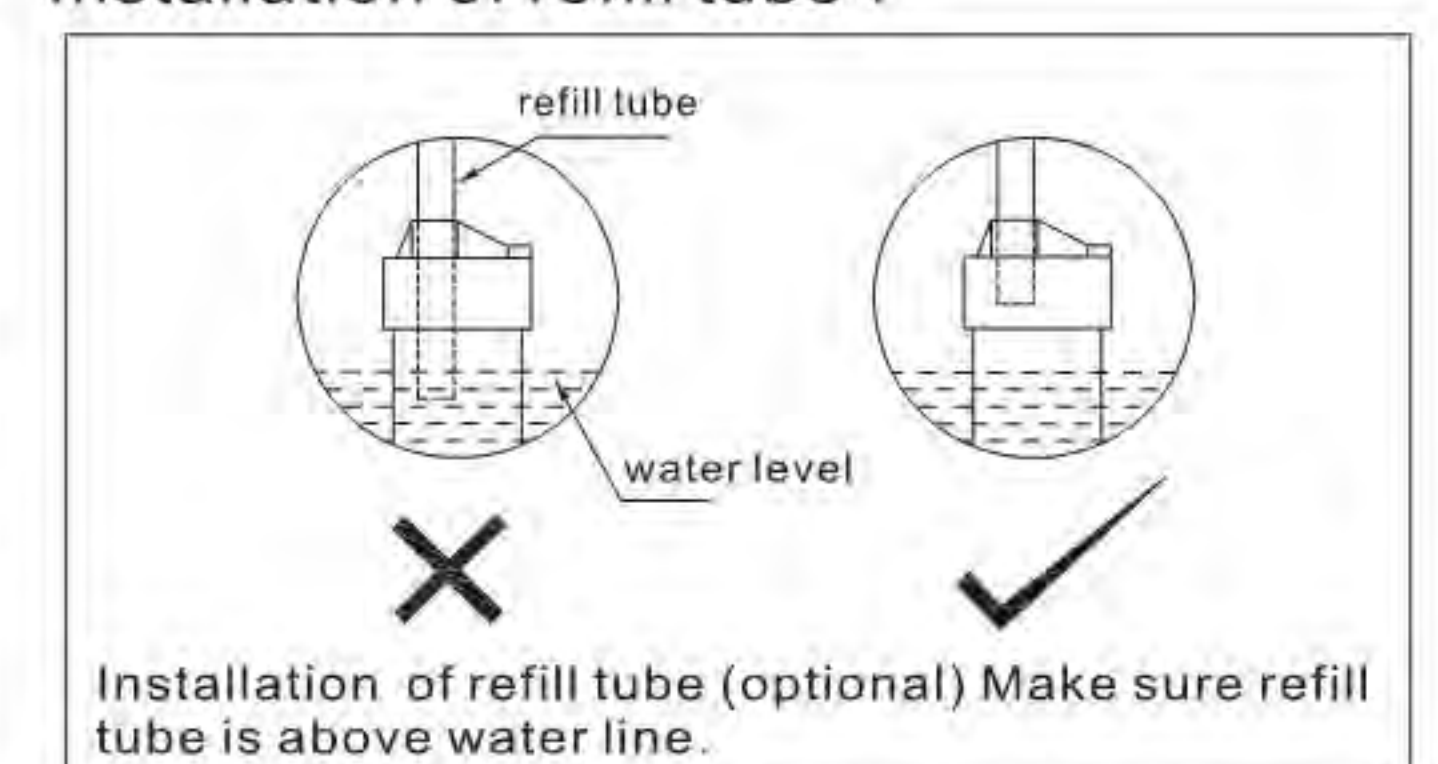

Thank you for choosing our product. You may contact our local dealer directly for prompt service if you have any questions.