ESSENCE


DESIGN + ENGINEERING GROHE GERMANY


99.1267.031/ÄM 243700/09.19


www.grohe.com


Pure Freude an Wasser




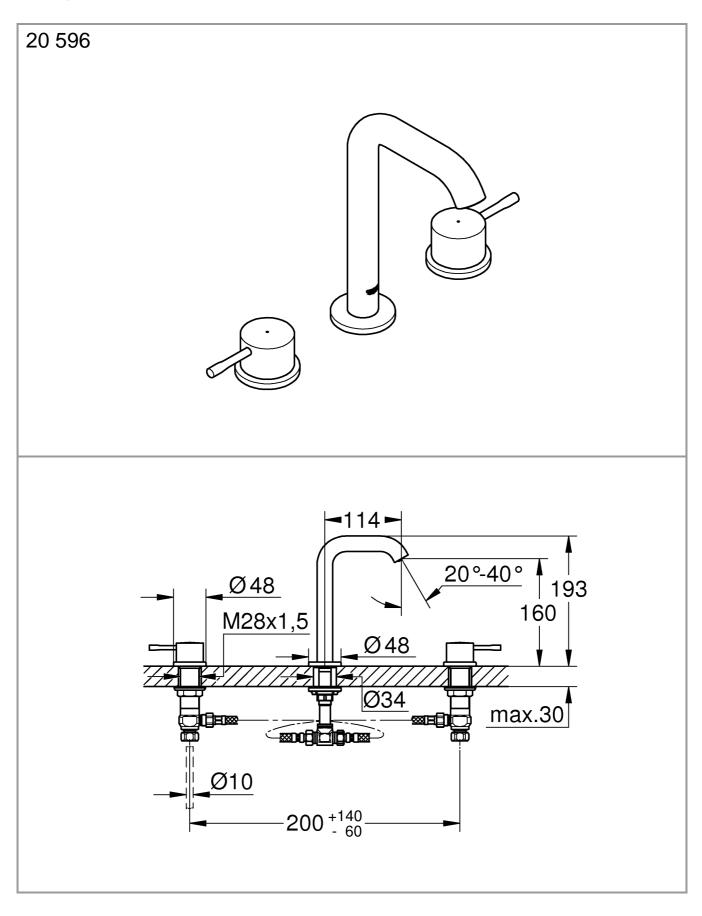


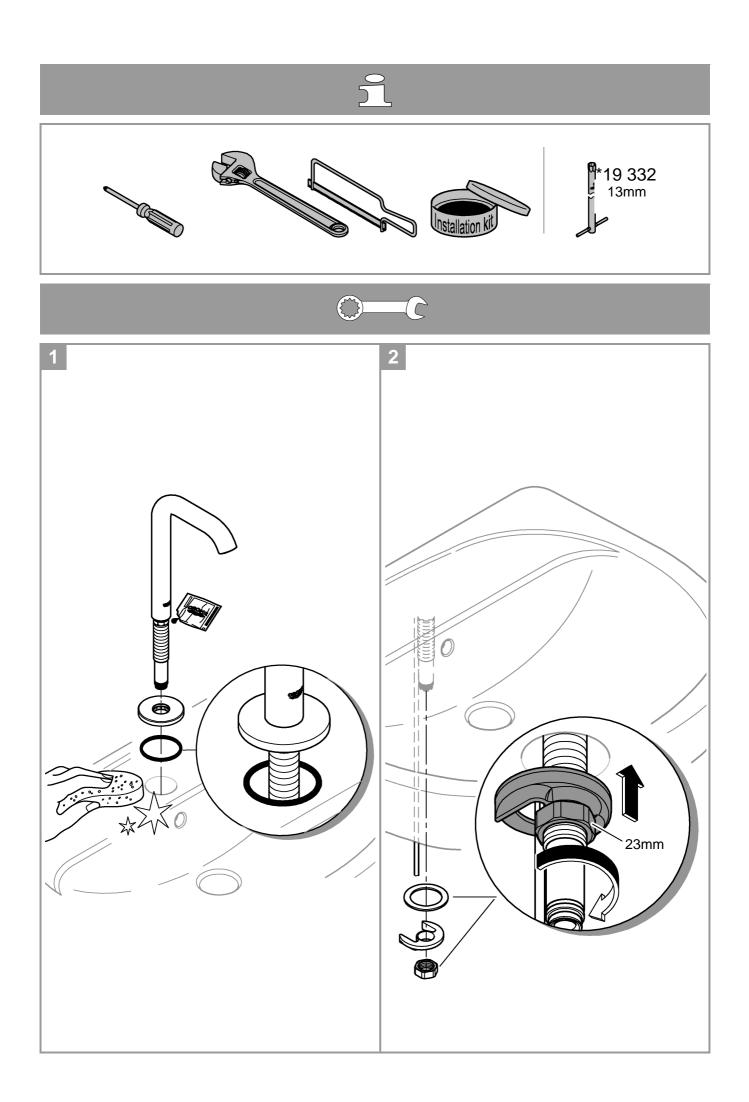

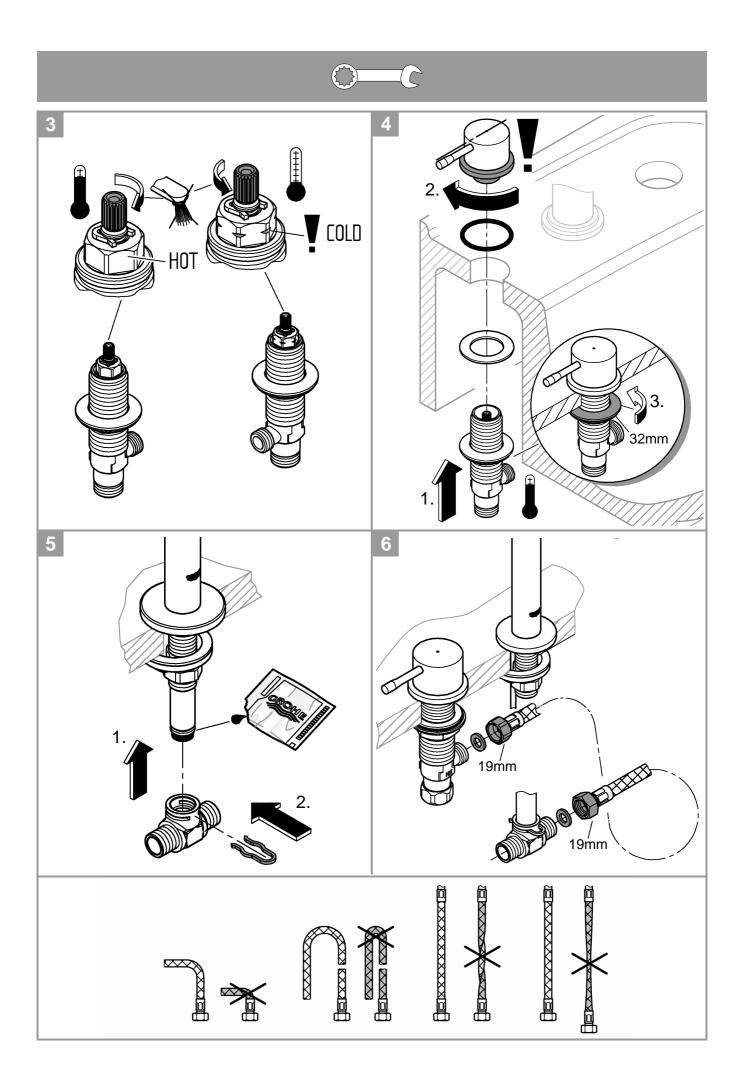

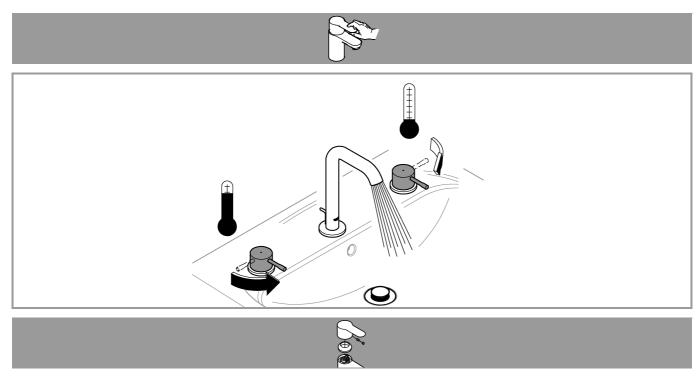

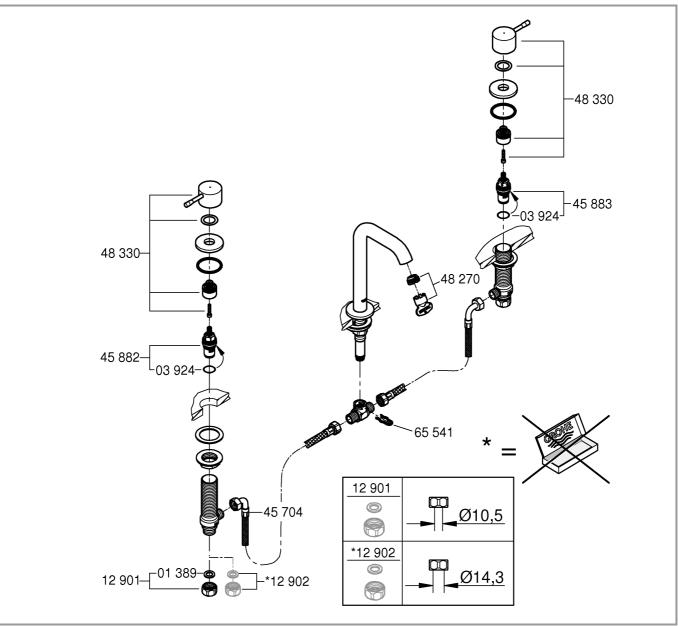

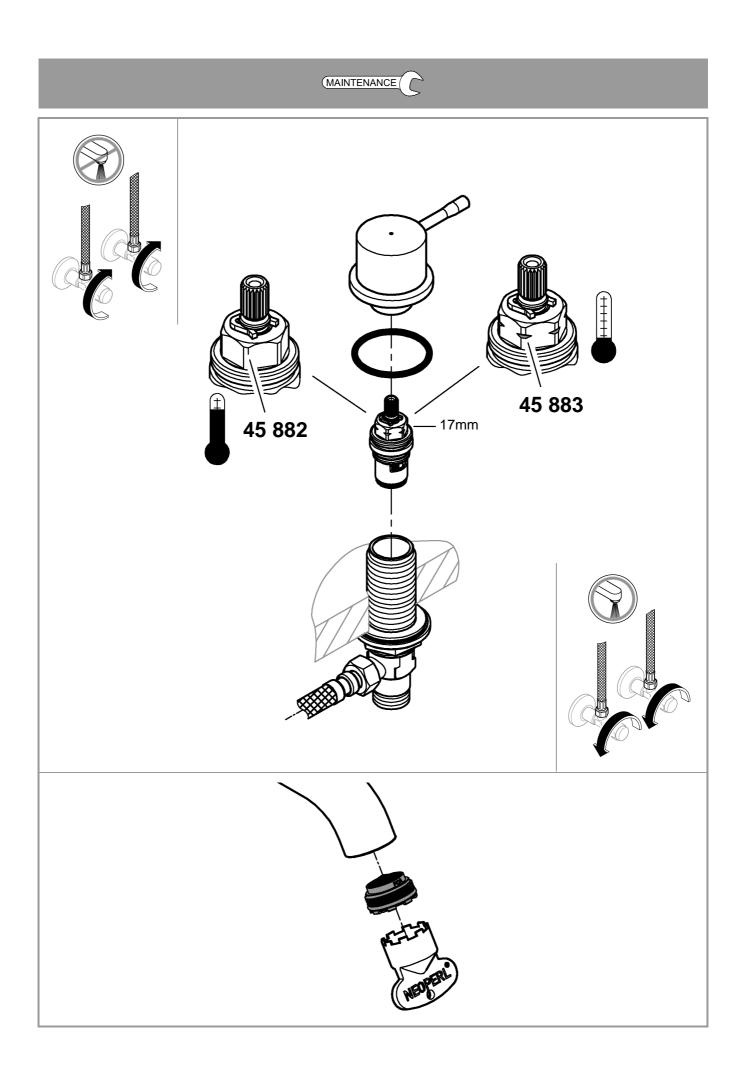

Application

• for basin

Can be used in conjunction with:

- · Pressurised storage heaters
- · Thermally controlled instantaneous heaters
- Hydraulically controlled instantaneous heaters

Operation with unpressurised storage heaters (open water heaters) is $\ensuremath{\text{not}}$ possible.

Specifications:

- Flow pressure min. 50 kPa recommended 100 500 kPa
- Operating pressure max. 1000 kPa
- Test pressure 1600 kPa

If static pressure is greater than 500 kPa, fit pressure reducer.

Avoid major pressure differences between hot and cold water

supply.

• Temperature

Hot water inlet:

Recommended:

Thermal disinfection possible

Water connection cold - Right hand

hot - Left hand



Flush piping system prior and after installation of fitting thoroughly (Consider EN 806)!

This product must be installed in conformance with local codes e.g. AS/NZS 3500 series of standard!

Installation, see Fig. [1] - [6].

Refer to the dimensional drawing.

AUS

Reece Australia Pty Ltd 118 Burwood Hwy Burwood VIC 3125

Tel.: +61 3 9274 0000 Email: admin@reece.com.au



Open cold and hot-water supply and check connections for watertightness!



Check fitting for correct operation.




Maintenance

Inspect and clean all parts, replace as necessary and grease with special grease.

Shut off cold and hot water supply!

Assemble in reverse order.

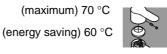

Replacement parts (* = special accessories).

Care

For directions on the care of this fitting, refer to the accompanying Care Instructions.

NZ

Robertson 25 Vestey Drive Mt Wellington, Auckland

Tel.: +64 9 5730490 Email: sales@robertson.co.nz