
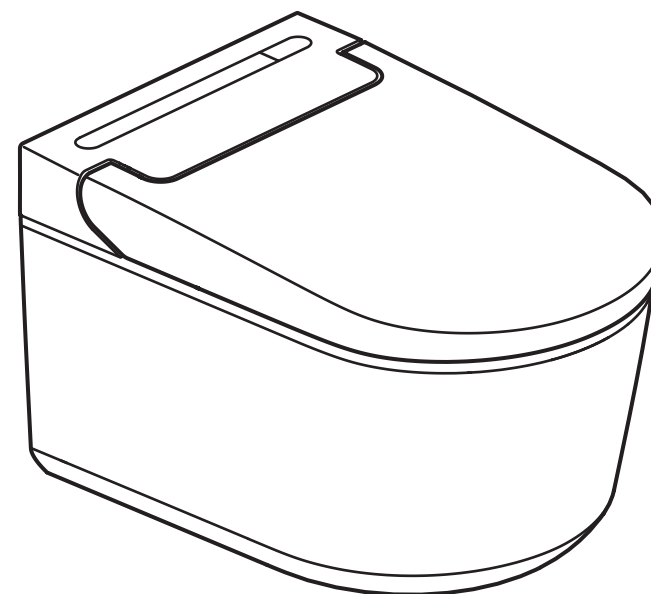


IGINA Wall-huag
DESIGN + ENGINEERING
GROHE GERMANY

97.0113.031/ÄM 256625/08.23

<http://www.grohe.com>

GROHE

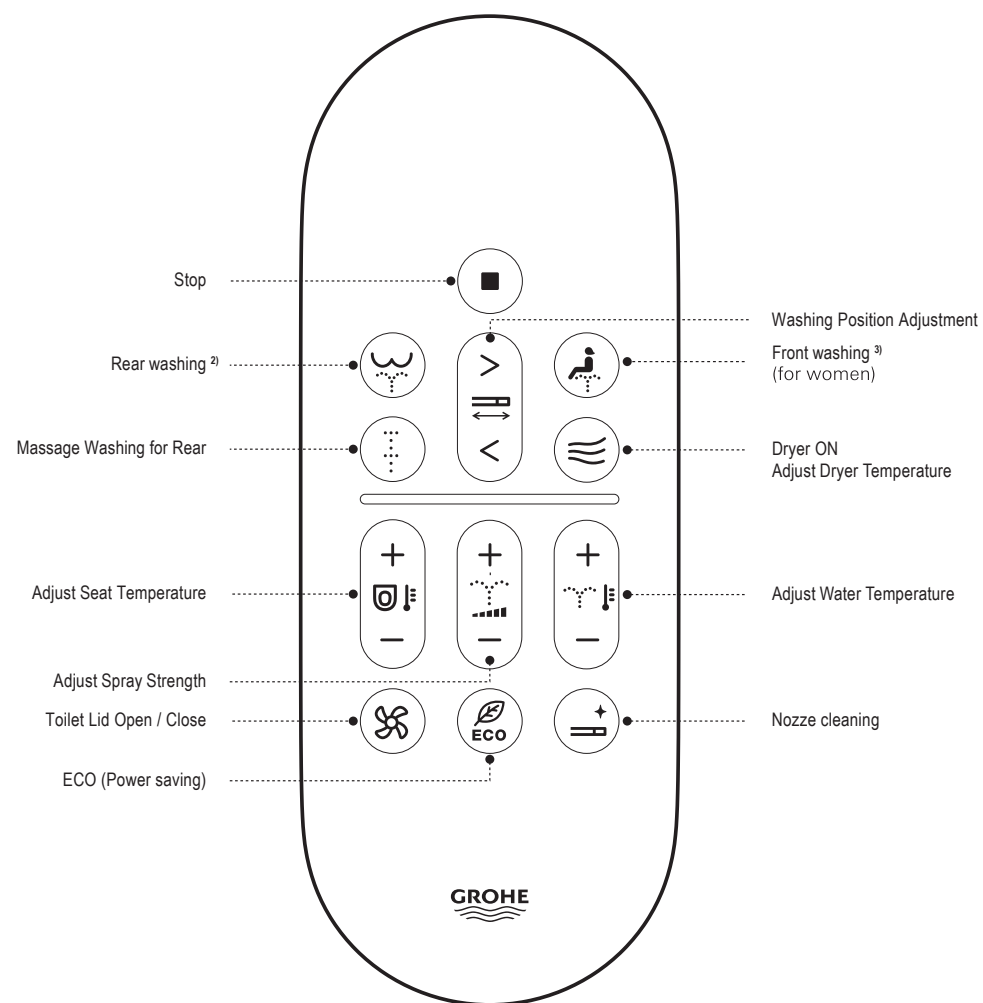

QUICK START GUIDE

IGINA Wall-hung

This Quick Start Guide does not replace the User Manual.
 Please read the User Manual and observe the warnings and safety instructions.



36552SH0



36553SH0



102914SH00




102915SH00


Scan for more language options

GROHE IGINA Wall-hung
QUICK START GUIDE

1. START




AUTO ¹⁾
The lid automatically opens when you stand in front of the toilet.



MANUAL ¹⁾
Open the lid by pressing the Toilet Seat Close / Open button on the remote control.

2. WASH



WASH

Rear washing ²⁾
Front washing ³⁾

ADJUST


Spray strength
Water temperature

STOP

Stop spray

²⁾ Press 1x: Rear Spray, press 2x: Oscillating mode wide, press 3x: Oscillating mode narrow
³⁾ Press 1x: Lady Shower, press 2x: Wide spray mode, press 3x: Super wide spray mode

3. DRY



DRY

Dryer

ADJUST ⁴⁾


Dryer temperature

STOP

Stop dryer

⁴⁾ Press 1x: Mid, press 2x: High, press 3x: Low; press 4x: Mid

4. FLUSH




AUTO ⁵⁾
The flush is automatically activated when you stand up
⁵⁾ This function is available only when the GROHE cistern is equipped with the automatic flush kit (sold separately).


MANUAL

Press the flush button on the wall


5. FINISH



AUTO ¹⁾
The lid closes automatically when you step away from the toilet.



MANUAL ¹⁾
Close the lid and seat by pressing the Toilet Seat and Lid Close button on the remote control

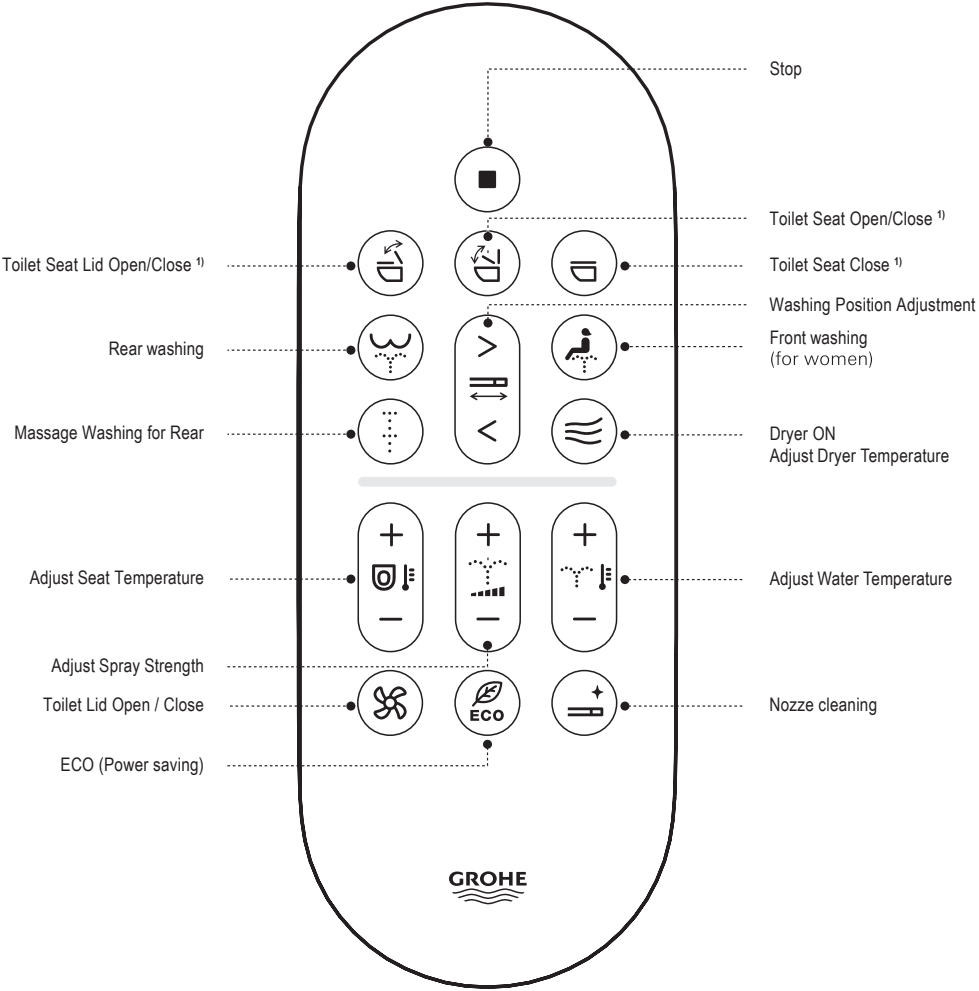

¹⁾ This function is only available for 36553SH0 and 102915SH00.