

GROHE IGINA Wall-hung MAINTENANCE GUIDE

ADDITIONAL INFORMATION

For all troubleshooting, more detailed descriptions, all cleaning steps, or how to remove the lid for cleaning purposes, scan the QR code.





Scan to download a detailed user guide


IGINA Wall-huag
DESIGN + ENGINEERING
GROHE GERMANY

97.0114.031/ÄM 256625/08.23

<http://www.grohe.com>

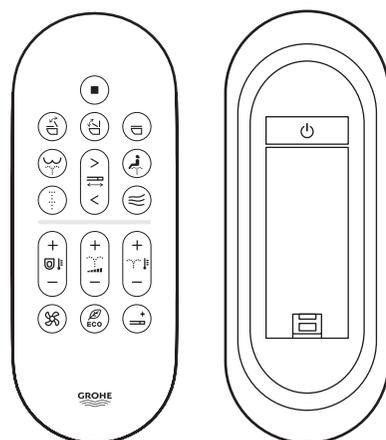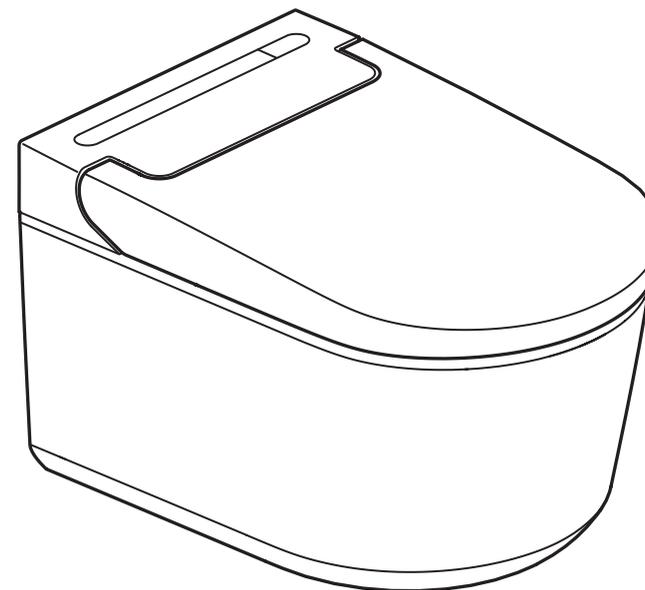

Remote for 36553SH0 and 102915SH00

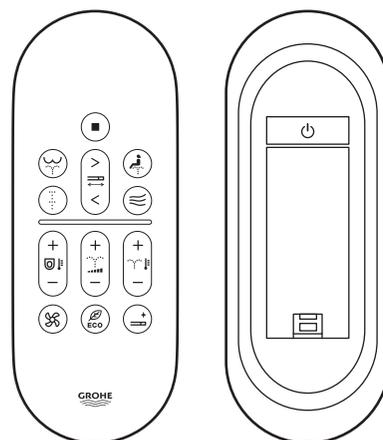

Remote for 36552SH0 and 102914SH00

MAINTENANCE GUIDE

IGINA Wall-hung

This Maintenance Guide does not replace the User Manual. Please read the User Manual and observe the warnings and safety instructions.



36552SH0



36553SH0



102914SH00



102915SH00

Scan for more language options

GROHE IGINA Wall-hung MAINTENANCE GUIDE

GENERAL INFORMATION



To fully utilize the effect of AQUA CERAMIC **do not** use the following cleaners and tools:

- Strong alkali/acidic cleansers
- Abrasive cleansers
- Water-shedding or antifouling cleansers, or surface coating agents
- Cleaning tools that damage the material surface, such as metallic or abrasive brushes

 


For detailed cleaning instructions and recommended cleaning tools please scan the QR code on the last page of this guide.

FIRST STEP

SET THE OPEN/CLOSE TO OFF. *


* Only for 36553SH0 and 102915SH00.



Press "Stop" and "Toilet Seat Lid Open / Close" button simultaneously for 2 seconds.

SET THE AUTO FLUSH FUNCTION TO OFF. *

 * Only if auto flush kit is installed.



Press "Front Washing" and "Spray Strength Adjustment +" button simultaneously for 2 seconds.

CLEANING



TOILET SEAT / LID / COVER / REMOTE CONTROL

Using a soft, damp cloth, wipe the surface of the toilet seat, lid, cover and remote control. Note: Be sure to use a neutral cleaning product.



BOWL

Clean the bowl with (warm) water using a soft brush or a sponge soaked in a neutral cleaning product. The lid can also be removed for cleaning purposes (please scan QR code)

CLEANING THE NOZZLES

AUTOMATICALLY

To clean the nozzle while using the toilet (sitting on the seat) follow the procedure below using the remote control.



Press "Nozzle Clean" button.

MANUALLY

The nozzles can be extended for manual cleaning with a soft cloth while not using the toilet (not sitting on the seat). Please follow the procedure below using the remote control.






1. Press "Nozzle Clean" button, the Front washing nozzle extends without spraying water.
2. Press "Nozzle Clean" button again, then the Front washing nozzle retracts, and the rear washing nozzle extends without spraying water.
3. Press "Nozzle Clean" button again, the nozzle retracts.

CLEANING / REPLACING THE NOZZLE TIPS

The nozzle tips can be removed for optimal cleaning and replacement.

Note: To extend and retract the nozzle, see "Cleaning the nozzles manually".

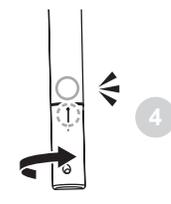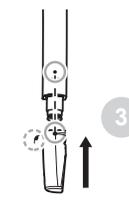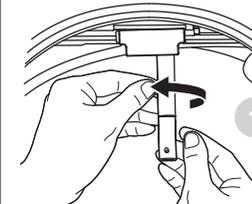

When the nozzle is extended, turn the nozzle tip to the left and pull it off.

To put the nozzle tip back, place it as shown in the picture onto the nozzle and turn it to the right.

FINAL STEP

Follow first step to set auto flush function* to ON.

*Only when auto flush kit is installed.