 


**User profile**

**[User profile 1] / [User profile 2] / [User profile 3]**  
 To remember your preferred [Nozzle position] [Spray strength] [Water temperature] setting.

- **How to set**
  1. Sit on the seat.
  2. Press rear washing or front washing button.
  3. Set the functions according to your preferences. (Nozzle position, spray strength, water temperature)
  4. Press [Stop] + [User Profile1] or [Stop] + [User Profile2] or [Stop] + [User Profile3] button simultaneously for 2 seconds.

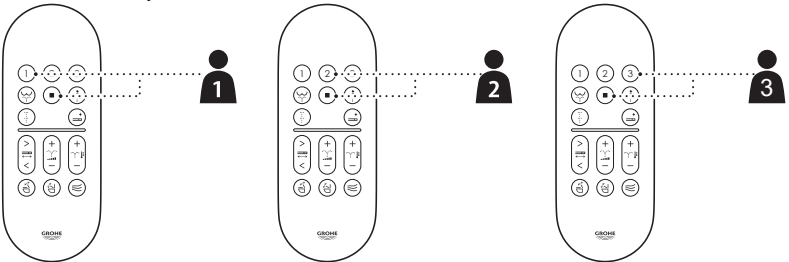


- **How to use**  
 Press [User Profile1] or [User Profile2] or [User Profile3], before using Front washing or Rear washing.  
 \* Nozzle position will back to middle by default after using.

**ADDITIONAL INFORMATION**

The Sensia Pro must be decalcified on a regular basis.  
 For more detailed information see the users guide.

For all troubleshooting, more detailed descriptions, all cleaning steps, or how to remove the lid for cleaning purposes, scan the QR code.





Scan to download a detailed user guide

**Sensia PRO**  
 DESIGN + ENGINEERING  
 GROHE GERMANY

97.0099.031/ÄM 256593/08.23

<http://www.grohe.com>

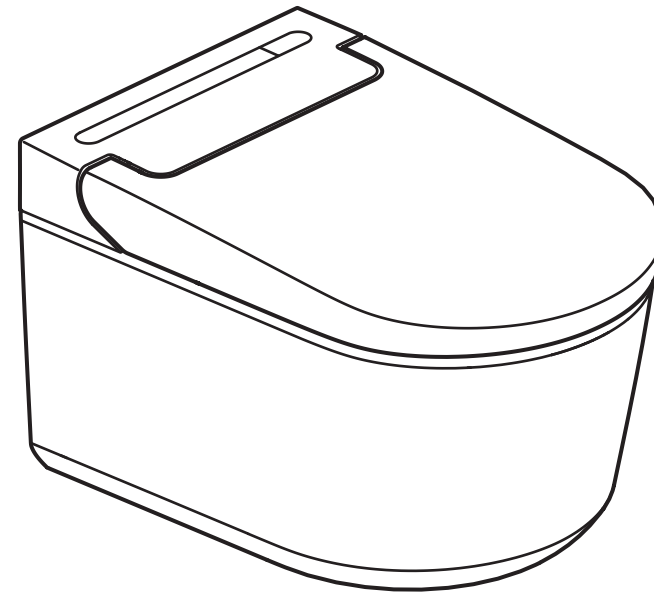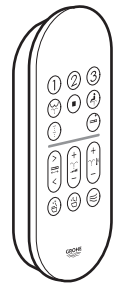

**QUICK START GUIDE**  
**SENSIA PRO**


This Quick Start Guide does not replace the User Manual.  
 Please read the User Manual and observe the warnings and safety instructions.



# GROHE SENSIA PRO QUICK START GUIDE


### 1. START

**AUTO**




The lid automatically opens when you stand in front of the toilet.

**MANUAL**



Open the lid by pressing the Toilet Seat Close / Open button on the remote control.

**PREFLUSH**






Once you are seated on the toilet, the automatic cleaning of the spray arms begins.

If your GROHE cistern is equipped with the automatic flush kit (sold separately), once you are seated on the toilet, a small amount of water will rinse the bowl to minimize stain accumulation.

### 2. WASH


**WASH**




-  Rear washing <sup>1)</sup>
-  Front washing <sup>2)</sup>

**ADJUST**


Spray strength




Water temperature



Nozzle position




**STOP**


 Stop spray

<sup>1)</sup> Press 1x: Rear Spray; Press 2x: Oscillating mode wide; Press 3x: Oscillating mode narrow  
<sup>2)</sup> Press 1x: Lady Shower; Press 2x: Wide spray mode; Press 3x: Super wide spray mode


### 3. DRY

**DRY**




 Dryer

**ADJUST** <sup>3)</sup>

 Dryer temperature


**STOP**

 Stop dryer

<sup>3)</sup> Press 1x: Mid, press 2x: High, press 3x: Low; press 4x: Mid

### 4. FLUSH <sup>4)</sup>

**AUTO** <sup>5)</sup>



The flush is automatically activated when you stand up

<sup>4)</sup> This function is not available for cycle model (14533SH0).  
<sup>5)</sup> This function is available only when the GROHE cistern is equipped with the automatic flush kit (sold separately).

**MANUAL**

Press the flush button on the wall

### 5. FINISH

**AUTO**



The lid closes automatically when you step away from the toilet.

**MANUAL**



Close the lid and seat by pressing the Toilet Seat and Lid Close button on the remote control

