
SCWC-1040

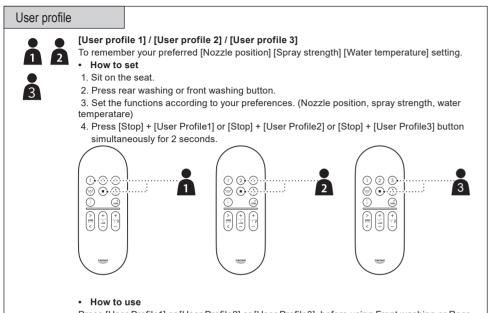

Press [User Profile1] or [User Profile2] or [User Profile3], before using Front washing or Rear washing.

* Nozzle position will back to middle by default after using.

ADDITIONAL INFORMATION

The Sensia must be decalcified on a regular basis. For more detailed information see the users guide.

For all troubleshooting, more detailed descriptions, all cleaning steps, or how to remove the lid for cleaning purposes, scan the QR code.



Scan to download a detailed user guide

grohe.com

 \oplus

Sensia

 \oplus

DESIGN + ENGINEERING GROHE GERMANY


97.0098.031/ÄM 256593/08.23

http://www.grohe.com



n@®

@00

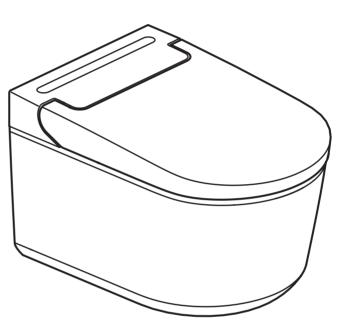

QUICK START GUIDE

This Quick Start Guide does not replace the User Manual. Please read the User Manual and observe the warnings and safety instructions.



 \oplus

Scan for more language options

PART OF LIXIL

GROHE SENSIA QUICK START GUIDE

 \oplus

1. START	
	MANUAL Open the lid by hand.
	PREFLUSH Once you are seated on the toilet, the automatic cleaning of the spray arms begins. If your GROHE cistern is equipped with the automatic flush kit (sold separately), once you are seated on the toilet, a small amount of water will rinse the bowl to minimize stain accumulation.
2. WASH	
	WASH ADJUST STOP Image: Rear washing 10 Image: Hear washing 20 Image: Hear washing 20 Image: Stop spray strength of the stop
	[↑] Press 1×: Rear Spray; Press 2×: Oscillating mode wide; Press 3×: Oscillating mode narrow ²⁾ Press 1×: Lady Shower; Press 2×: Wide spray mode; Press 3×: Super wide spray mode
3. FLUSH	
	AUTO ³) MANUAL The flush is automatically activated when you stand up Press the flush button on the wall ³) This function is available only when the GROHE cistern is equipped with the automatic flush kit (sold separately).
4. FINISH	
	MANUAL Close the lid and seat by hand.

 \oplus

 \oplus

