

## DESIGN + ENGINEERING GROHE GERMANY


99.0969.031/ÄM 241993/01.18


www.grohe.com




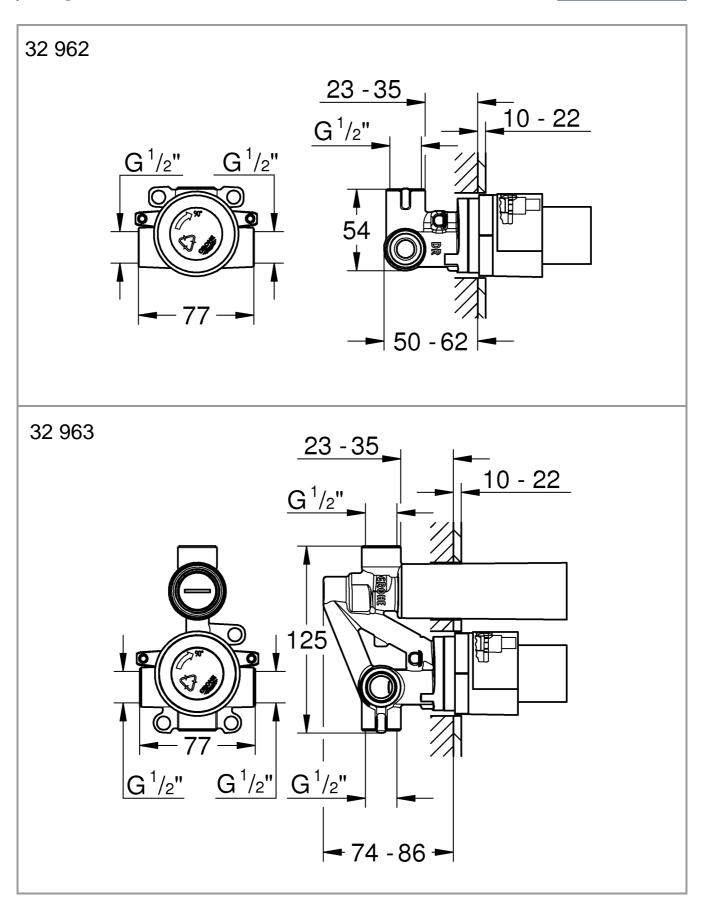

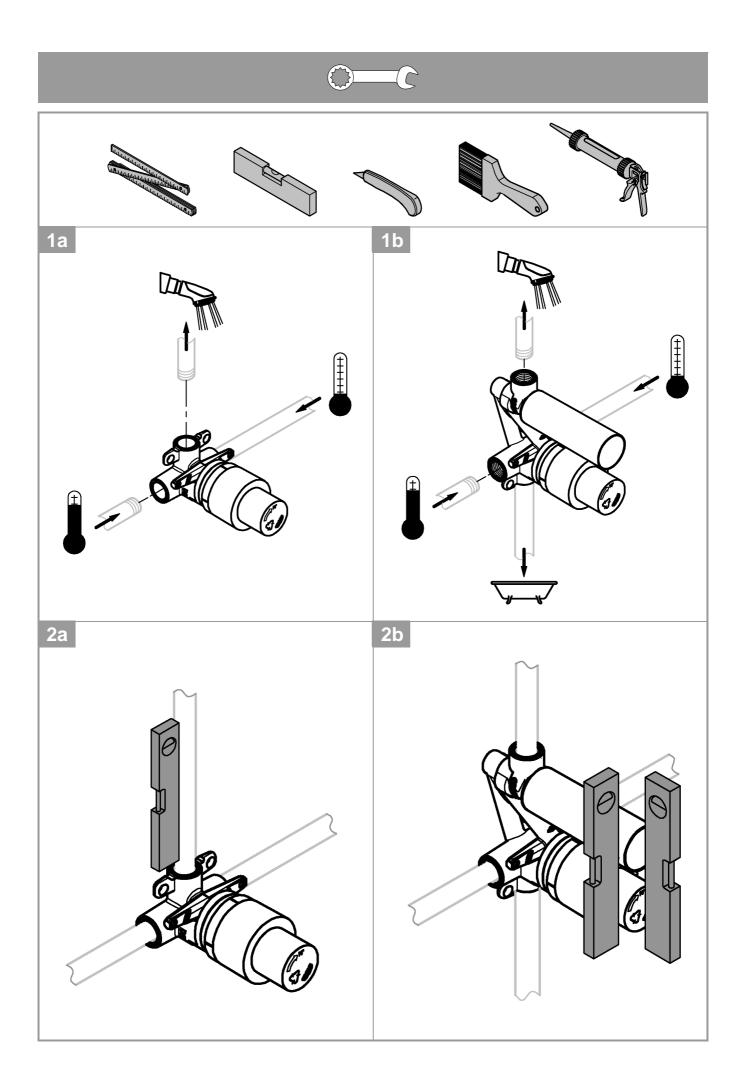

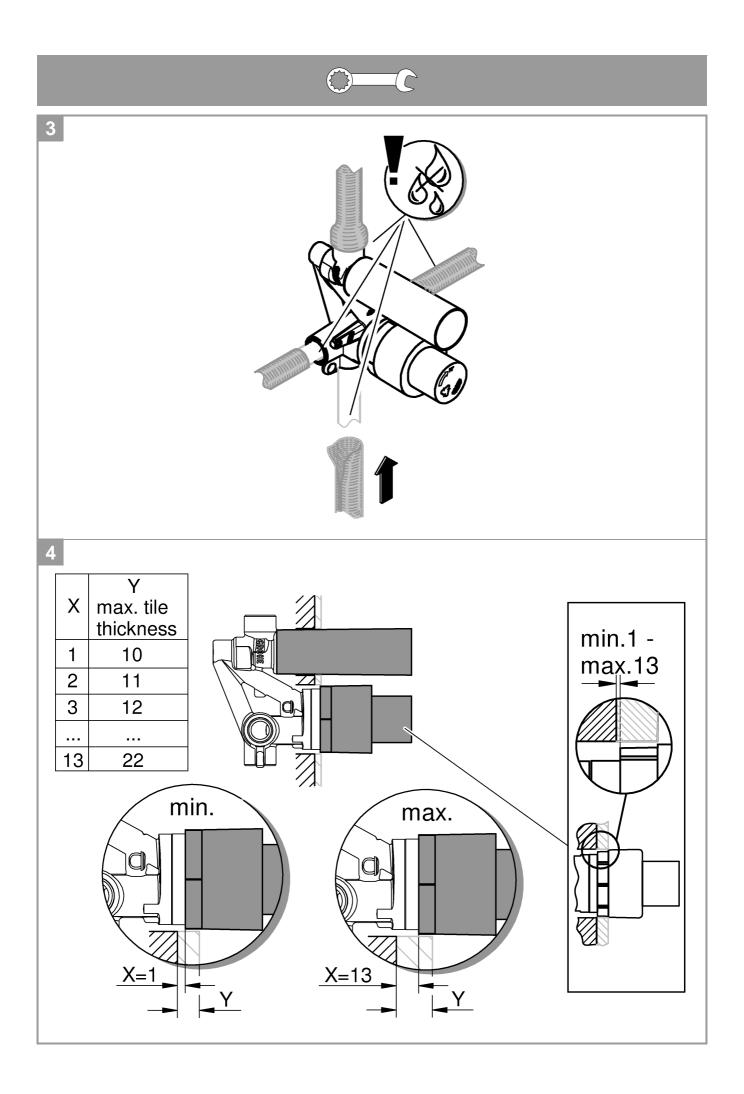

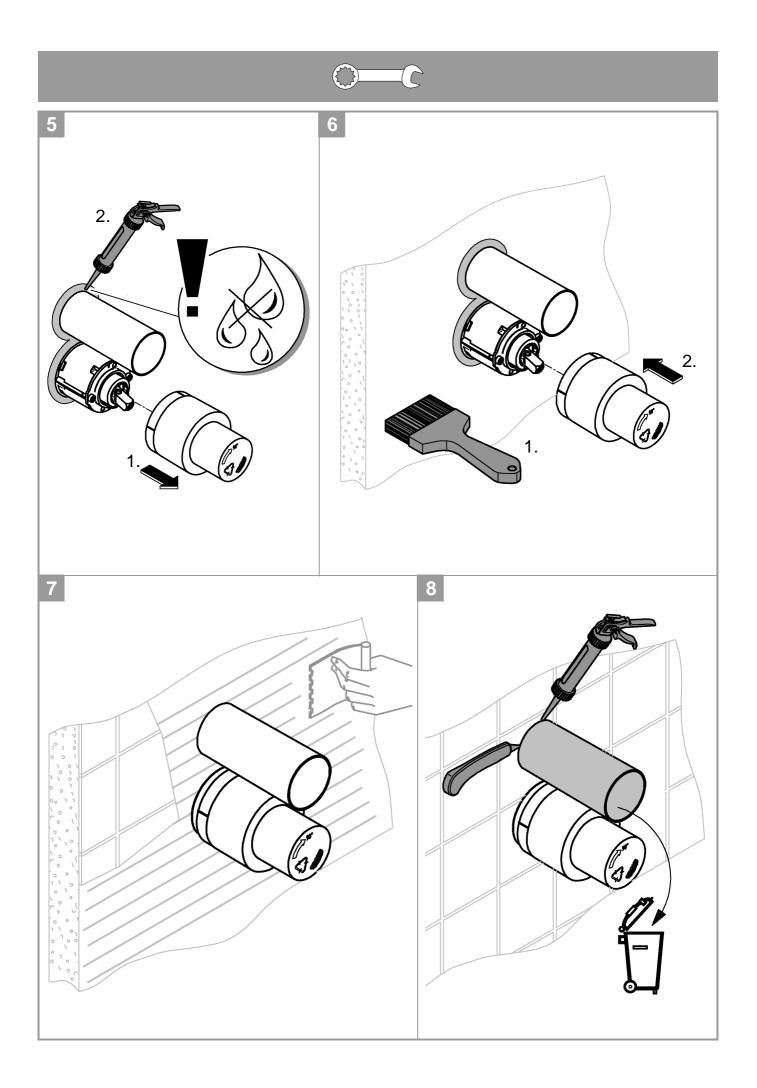

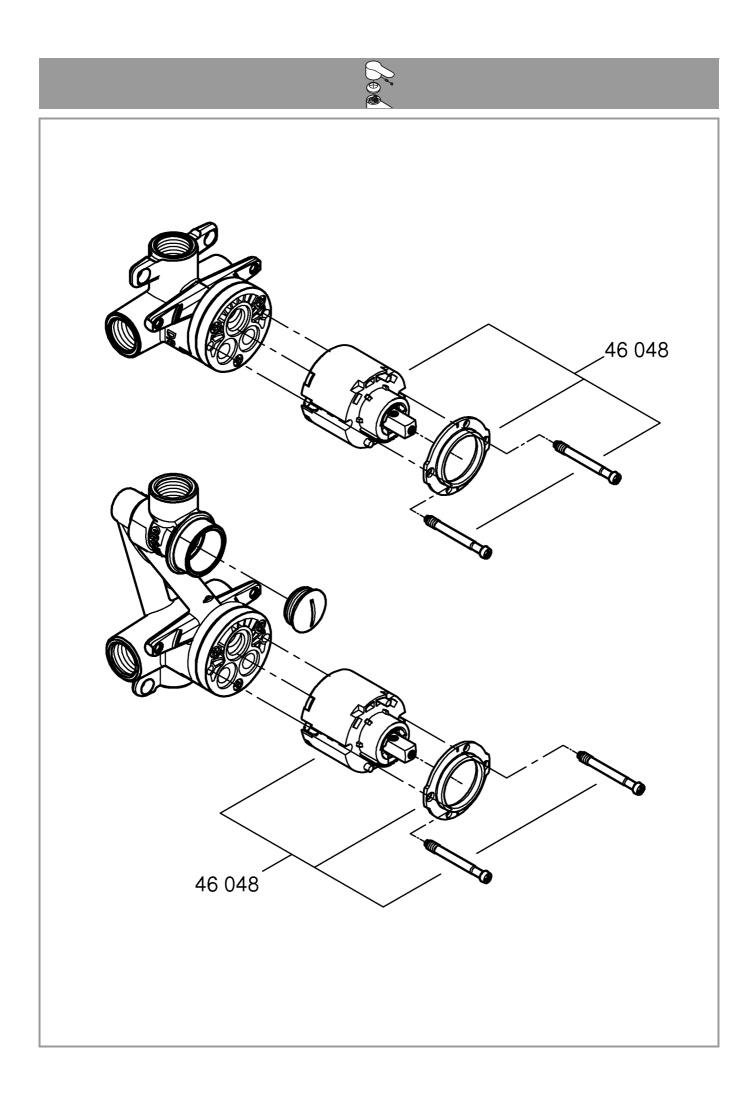

### Installation Instructions

# Flush piping system prior and after installation of fitting thoroughly!

This product must be installed in conformance with local codes e.g. AS/NZS 3500 series of standard!

### Installation and connection, see Figs [1] to [6].

Refer to the dimensional drawings.

#### PLEASE NOTE:

For 32962 face of noggins need to be positioned a minimum of 50mm and a maximum of 62mm from where the unfinished wall surface will end up.

For 32963 face of noggins need to be positioned a minimum of 74mm and a maximum of 86mm from where the unfinished wall surface will end up.

#### Note:

When installing concealed mixer body, please note it must be mounted onto timber or solid walls using appropriate reinforcement to ensure sufficient strength.

## Open cold and hot water supply and check connections for leakage!

### Specifications

- Flow pressure min. 50 kPa recommended 100 500 kPa
- Operating pressure max. 1000 kPa
- Test pressure
  1600 kPa

If static pressure is greater than 500 kPa, fit pressure reducer. Avoid major pressure differences between hot and cold water supply.

• Flow rate at 300 kPa flow pressure approx. 27 L/min

# Temperature Het water inlet:

Hot water miet.	(maximum) 70°C
Recommended:	(energy saving) 60 °C
Thermal disinfection possible	
Water connection	cold - right hot - left

(maximum) 70 °C

#### Important note:

Never install shut-off valves in the outlet pipe (mixed water) downstream of any built-in mixer.

## AUS

Reece Australia Pty Ltd 118 Burwood Hwy Burwood VIC 3125

Tel.: +61 3 9274 0000 Email: admin@reece.com.au



NZ

Robertson 25 Vestey Drive Mt Wellington, Auckland

Tel.: +64 9 5730490 Email: sales@robertson.co.nz